

CHOPLIFTER (834 - 5795)

COIN / CREDIT OPTION SWITCH SETTING

DIP SWITCH #A

OPTION	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN 3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN 4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN 5 CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN 6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS 1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS 1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS 1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS 3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS 1 CREDIT	OFF	ON	OFF	ON	OFF	ON	OFF	ON
4 COINS 2 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
5 COINS 3 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
6 COINS 4 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
2 COINS 1 CREDIT	ON	ON	OFF	ON	ON	ON	OFF	ON
4 COINS 3 CREDITS	ON	ON	OFF	ON	ON	ON	OFF	ON
1 COIN 1 CREDIT	OFF	OFF	ON	ON	OFF	OFF	ON	ON
2 COINS 2 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
3 COINS 3 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS 4 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
5 COINS 6 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
1 COIN 1 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
2 COINS 2 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COINS 3 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
4 COINS 5 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
1 COIN 1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
2 COINS 3 CREDITS	OFF	ON	ON	ON	OFF	ON	ON	ON
1 COIN 1 CREDIT	ON	ON	ON	ON	ON	ON	ON	ON

 
 
COIN SWITCH #1

COIN SWITCH #2



OPTION SWITCH SETTING

DIP SWITCH #B

OPTION	1	2	3	4	5	6	7	8
TABLE UPRIGHT	OFF ON							
ADVERTISE SOUND	OFF ON	OFF ON						
PLAYER HELICOPTER	3 2 4 FREE		OFF ON OFF ON	OFF ON OFF ON				NOT USE
SCORE OF ADDITIONAL PLAYER	20000, 70000 120000, 170000 50000, 100000 150000, 200000				OFF ON			
GAME DIFFICULTY	EASY HARD					OFF ON		

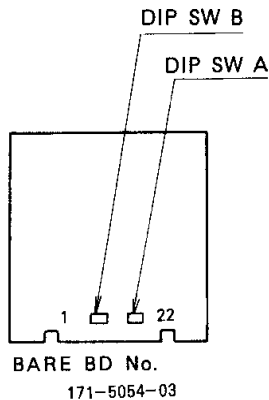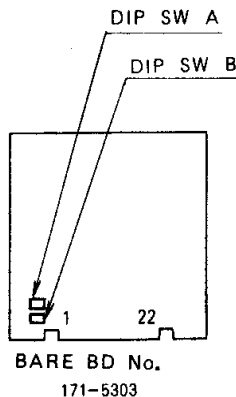

  44PIN P=3.96mm
COMPONENT SIDE SOLDER SIDE

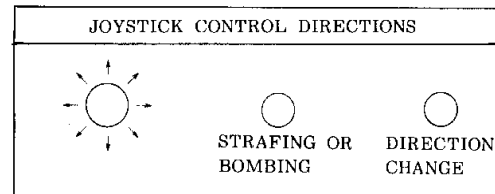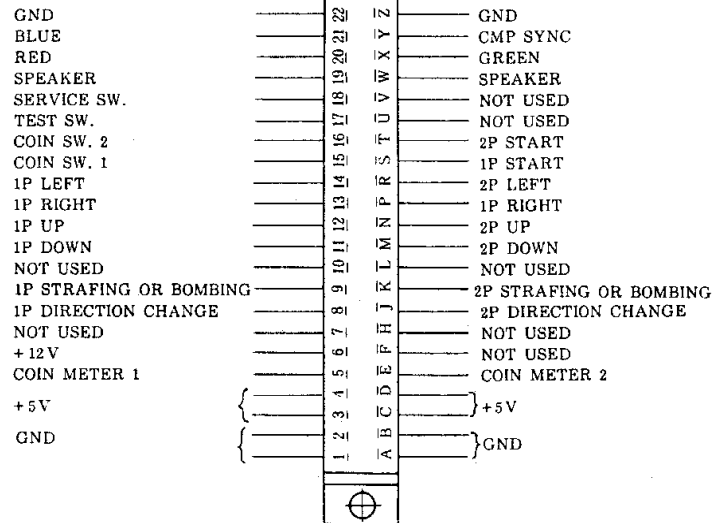

SUPPLY VOLTAGES & CURRENT	
VOLTAGE	CURRENT
DC5V	4.5 A
DC12V	0.25 A

