 
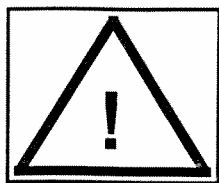 
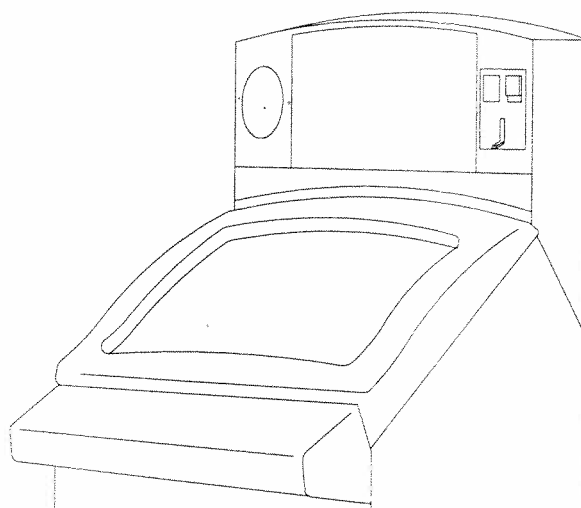 


CLEANING THE TOUCHMASTER™

**CAUTION**

USE **ONLY** ISOPROPYL ALCOHOL OR WARM WATER AS CLEANING SOLUTIONS. **DO NOT USE PRODUCTS WITH AMMONIA, BLEACH, LEMON, VINEGAR, TSP (TRI-SODIUM PHOSPHATE), OR ANY ABRASIVE INGREDIENTS.**

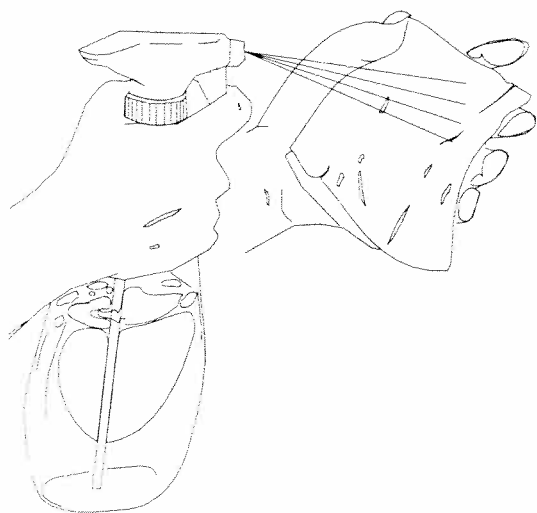

APPLY CLEANER TO A CLEAN CLOTH OR SPONGE, THEN WIPE THE TOUCHSCREEN. **DO NOT APPLY SOLUTIONS DIRECTLY ON THE GLASS SCREEN OR ON THE CABINET!**

SOME EXTRA STRENGTH CLEANERS CAN CAUSE TOUCHSCREEN SENSORS TO FAIL. DAMAGED TOUCHSCREENS CAN NOT BE RECALIBRATED ACCURATELY BECAUSE FAULTY SENSORS WILL NOT DETECT FINGER POSITION.

TOUCHSCREENS USE A CLEAR SURFACE COATING TO PROTECT SENSORS. ABRASIVES AND SCOURING PADS CAN SCRATCH THIS COATING AND REDUCE VIEWABILITY.