




OPERATION AND SERVICE MANUAL





KEE GAMES

2175 Martin Ave.
Santa Clara, CA. 95051
(408) 249-6090


TANK CUSTOMER ADJUSTMENTS

Motor Volumes 

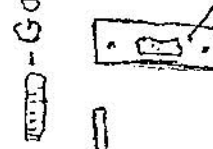
 - Gametime
Coin/Option Switch

Explosion Volumes 

Board I


 Factory Adjustments

ONLY DO NOT TOUCH

Firing Range for White tank only 

Range for black tank Pre set

Board II

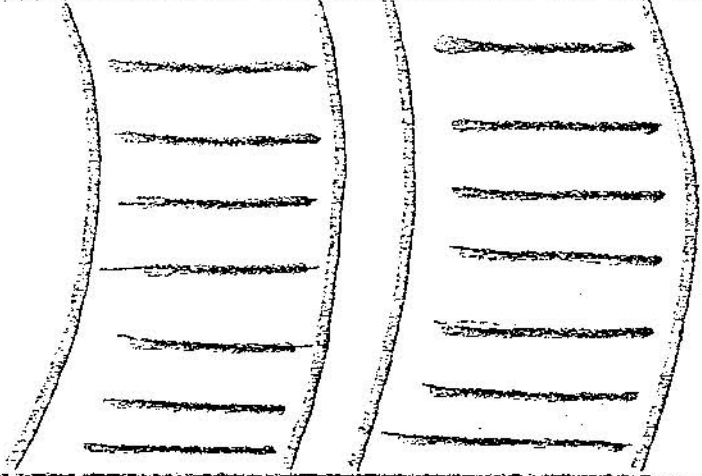

The motorola TV and Tank Circuit Boards have been designed to give you, the customer, the most trouble free unit possible. The circuits used are all solid state for long life and reliability.

Our games are designed with the customer in mind and we appreciate any and all comments from the field.

In the event your unit does require servicing, this manual will aid your efforts.

This manual consists of the following sections:

- I. Adjustments
- II. Diagnosis and Procedures
- III. Warranty and Service
- IV. Schematics

I. ADJUSTMENTS

There are two types of adjustments that can be made to your unit: TV & Circuit Boards.

The controls on the TV Monitor work as in any normal TV. Vertical Hold, Brightness, Contrast & Horizontal Hold. These are located on the back side of the monitor chassis. The vertical & horizontal hold controls should be set in the middle of their range. Turn control until picture tears or rolls, turn control back until picture tears or rolls in the opposite direction & then reset control to the middle of the stable range. The brightness & contrast should be set at a point where the mine field in the center of the playfield is clearly visible.

Circuit Board

On Circuit Board I, (which is on the left side of the cabinet, looking from the rear of the same) there are three (3) adjustments you may want to make.

Master Volume: These adjustments are located in the upper right area of the board. There is a small tab on each of these pots & when they are set at the same point the volume between the two tanks will be even.

Missile Firing & Explosion Sound: These adjustments are located in the upper left area of the board. Again there are two (2) pots to adjust. Setting the tabs evenly on the pots will set the volume evenly between the two tanks.

Game Time: There is one (1) switch located on Board I and next to this switch is the pot which adjusts the game time. This pot has been preset at the factory so that with the switch in the 25¢ position, one game is available for a quarter and will last for 60 seconds. With the switch in the 50¢ position, one game is available for two (2) quarters and will last for 120 seconds. You may set this switch as you wish and also adjust the time pot to your convenience.

Do not attempt to adjust any other pots located on these boards as they are factory adjustments and tampering with them may have detrimental effects upon the game.

II. DIAGNOSIS

<u>SYMPTOM</u>	<u>CHECK</u>
No Picture	Fuse, Power Cord, Harness Connections
No Sound	Speaker Connections, Volume Adjustments
Rolling or Tearing Picture	Re-Adjust TV Controls
Game Will Not Start	Coin Mechanism, Harness Connections
No Tank Movement	*Joystick Switches (proper alignment), Harness Connections
No Firing of Shell	*Joystick Switches, Harness Connections

*These are simple on/off switches and may be checked with an ohmmeter or continuity tester.

NORMAL GAME OPERATION

Inserting the coins immediately starts the game with one Tank in the upper left area of the playfield and the other Tank in the lower right area.

To move Tank forward, push both joysticks forward. To stop Tank, pull both joysticks back. For turning to the right, pull right joystick back and push left joystick forward.

To turn left, push right joystick forward and pull left joystick back. Silkscreened into the front panel are illustrated instructions for the different motions.

To fire the shells, push the red button on the right joystick down. One point is scored each time a shell hits the other Tank. If a Tank hits a mine, the opponent gains one point and the mine will disappear for the remainder of that game. When a Tank is hit by a shell or encounters a mine, an explosion sound is heard and the Tank flashes. Until this flashing has stopped, his opponent cannot fire another shell. Approximately 20 seconds before the game ends, the score display will begin flashing and continue until the game ends.

TV TROUBLESHOOTING

NO POWER: Check for blown fuses and proper line voltage. Also check to see if the interlock switch is in the on position, either with the rear door closed or with the switch defeated.

NO PICTURE: Check the monitor fuses. If blown, visually check the monitor for shorts. If fuses are OK, look to see if the CRT's choke filament is glowing and if there are any loose wires.

WHITE PICTURE BUT NO DISPLAY: This symptom indicates two problems. Either the PC Board or the TV is malfunctioning. To double check and make certain of the area of trouble, check the PC Boards that making sure power is reaching them and check the edge connectors making sure they are positioned correctly on the PC Boards. Also check the twelve (12) pin Molex connector on the TV making sure it is correctly connected.

WAVY PICTURE: If this condition exists, check the following two items to be sure they are functioning properly. First check the five (5) volt power supply on the two main circuit boards. This can be done by measuring between the two heavy traces on each board with a voltmeter or an oscilloscope. There should be $5 \pm 1/4$ volts on each board. Next, locate pin 32 on the large monitor circuit board. Measure the voltage from this pin to ground. There should be seventy-three (73) volts at this point. If the voltage is either too high or too low, adjust the 73 volt regulator pot located on the same PC Board in the upper left hand corner. DO NOT TURN THIS POT THRU THE WHOLE RANGE.

Damage will occur to it's associated parts. All that needs to be done is a slight turn to adjust properly.

IMPROPER DISPLAY: Recheck all picture adjustments (brightness, contrast, and etc.) to make sure they are correct.

REMOVAL & REPLACEMENT PROCEDURES

CONTROL PANEL: To achieve easy access to the joystick controls, open the front coin door and remove the two wing nuts mounting the control panel to the cabinet. There is one wing nut on each side. Slide the control panel out far enough to clear the mounting bolts from the cabinet and turn the panel upside down. Set the face of the panel down on the supporting blocks. The joystick controls are now exposed for servicing.

PLEXIGLASS REMOVAL: To remove the plexiglass, open the front coin door and remove the three wing nuts running along the upper frame member of the control panel. Pull the lower aluminum plexiglass anchoring bracket away from the game. The plexiglass should be pushed down and pulled out to remove it from the game.

TV MONITOR REMOVAL: To remove monitor for replacement or repair, first remove plexiglass by following the above plexiglass removal instructions. Also, remove the four screws mounting the plastic bezel. Loosen the two wing nuts by the corners of the CRT by way of the back door. Remove the 10 Pin Molex connector from the back side of the TV. By inserting a finger into the two holes on each side of the CRT, the monitor can be pulled out.

TV MONITOR REPLACEMENT: To replace the TV monitor, follow in reverse order the steps for monitor removal.

MOTOROLA MONITOR PC BOARD REMOVAL

POWER, AUDIO PC BOARD: To remove this PC Board, simply locate it on the left side of the monitor in back of the power transformer. Carefully pull up on the board. To replace this board, locate the slot between Pins 3 & 4 and put this on your left side, then simply insert into the edge connector.

MONITOR PC BOARD: To remove the monitor PC Board, take a screwdriver or a similar object and slowly pry the PC Board up off of the chassis until it clears the pins. Next, unplug the socket from the yoke and slide board out. To replace this board, follow the above steps in reverse order.

MAIN CIRCUIT BOARDS I & II

REMOVAL: Each board is mounted to the cabinet by two screws located one on each side. Remove the edge connectors first, then remove the four screws. DO NOT TRY TO SEPERATE THE TWO BOARDS. Each set of boards must remain as one unit. After removing boards, carefully follow board shipping procedure in order to reduce the chances of damage to a minimum.

REPLACEMENT: Follow the reverse steps of the removal procedures to replace the PC Boards.

PC BOARD SHIPPING PROCEDURES

When packaging PC Boards for shipment, make sure the top of each board is facing each other with either bubble wrap or foam rubber them. This interfacing must be thick enough to insure that parts of one board do not come in contact with the other board. DO NOT use small pieces of styrofoam as packing material between the boards. Careful packing is recommended as KEE GAMES, INC. cannot be liable for boards damaged in transit. Also, include a short statement describing the basic problem with the boards.

CABINET MAINTINANCE

Cleaning of the cabinet and plexiglass may be done with any non-abrasive household cleaner. The coin acceptors and lock cylinders should be lubricated periodically with any light oil or silicon aresol spray.

ACCESS DOORS


COIN DOOR: There are two coin mechs in each game. The extra coin mech is there for customer convenience and also as a spare in case of a coin jam in one of the mechs. The coin door provides access to the coin box and to all wing nuts used to secure the monitor, control panel and the bracket for the plexiglass CRT screen.

REAR DOOR: The rear door allows access to the Tank PC Board set, the fuse line filter and transformer assy, Motorola monitor controls and PC Board, and the wing nuts securing the control panel, plexiglass and TV monitor.

III. WARRANTY

The game is warranted for a period of ninety (90) days, excluding the TV, which is warranted for 30 days.

In case of failure, contact your distributor or KEE GAMES, 1280 Reamwood Ave., Sunnyvale, CA 94086 for repair or a replacement unit.

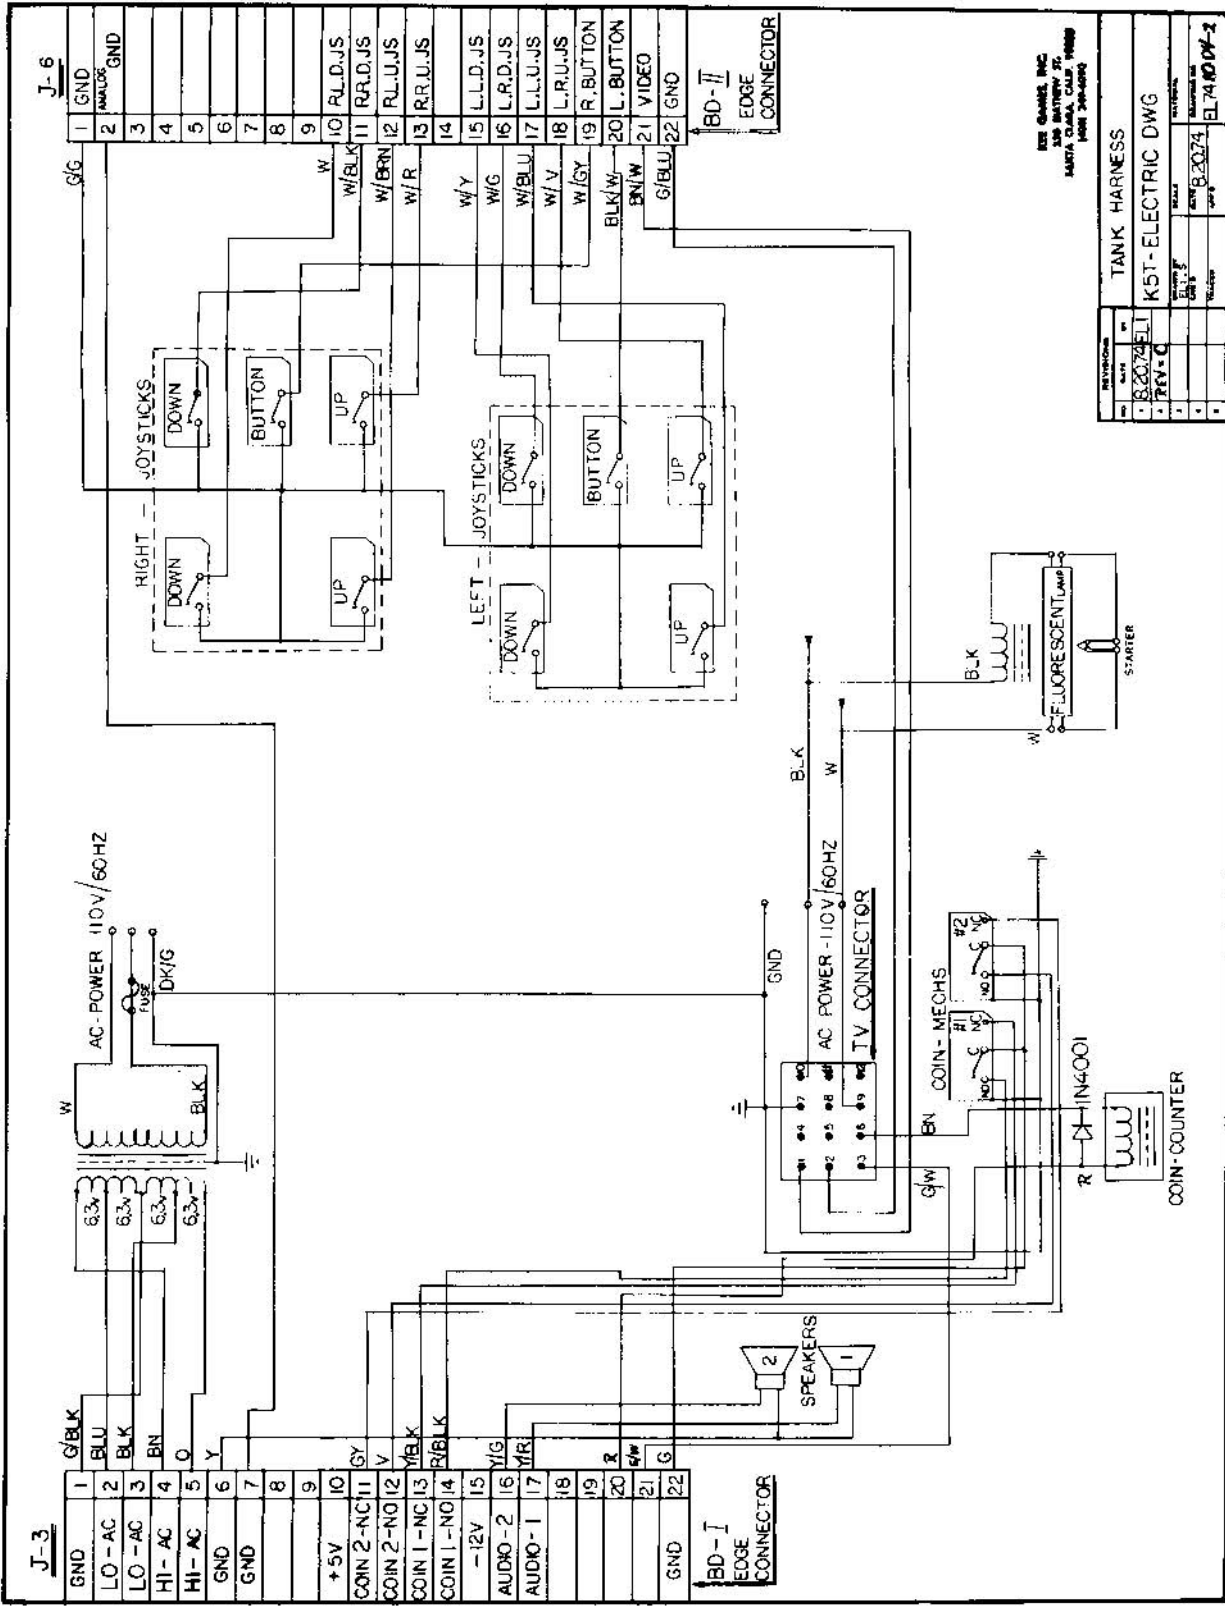

J-6

J-3

1	GND	G/G
2	ANALOG GND	
3		
4		
5		
6		
7		
8		
9		W
10	R.L.D.J.S	W/BLK
11	R.R.D.J.S	W/BRN
12	R.L.U.J.S	W/R
13	R.R.U.J.S	
14		W/Y
15	L.L.D.J.S	W/G
16	L.R.D.J.S	W/BLU
17	L.L.U.J.S	W/Y
18	L.R.U.J.S	W/GY
19	R.BUTTON	BLK/W
20	L.BUTTON	BRN/W
21	VIDEO	G/BLU
22	GND	

AC POWER 110V/60HZ
FUSE
DK/G

6.3V
6.3V
6.3V
6.3V

G/BLK
BLU
BLK
BN
O
Y

+5V
COIN 2-NC11
COIN 2-NO12
COIN 1-NC13
COIN 1-NO14

-12V
AUDIO-2
AUDIO-1


15
16
17

18
19
20
21
22

GND


BD-I
EDGE
CONNECTOR


BD-II
EDGE
CONNECTOR

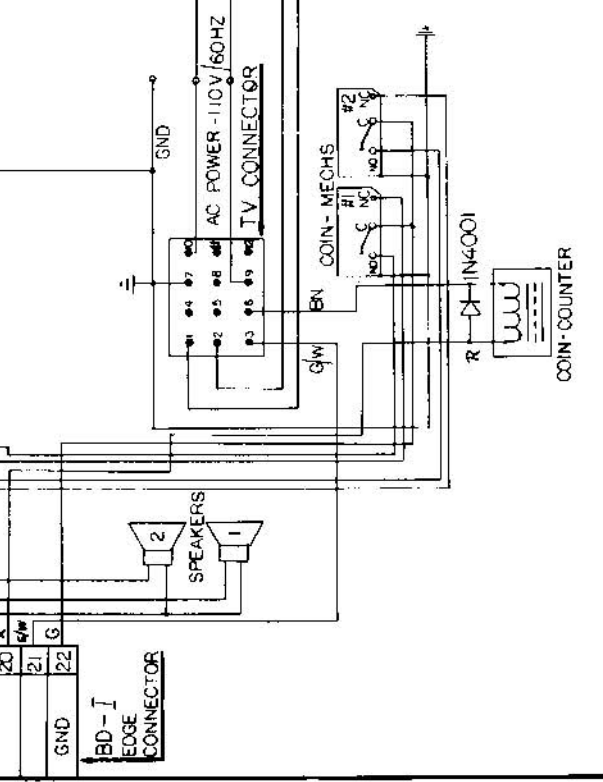


SEE GEAR, INC
300 BATTERY ST.
MARTIN DANA, CALIF. 94020
PHONE 380-6000

TANK HARNESS	
DATE	8.20.74
BY	TRV-C
CHK'D	B.3074
APP'D	
REVISION	EL-74-001-2

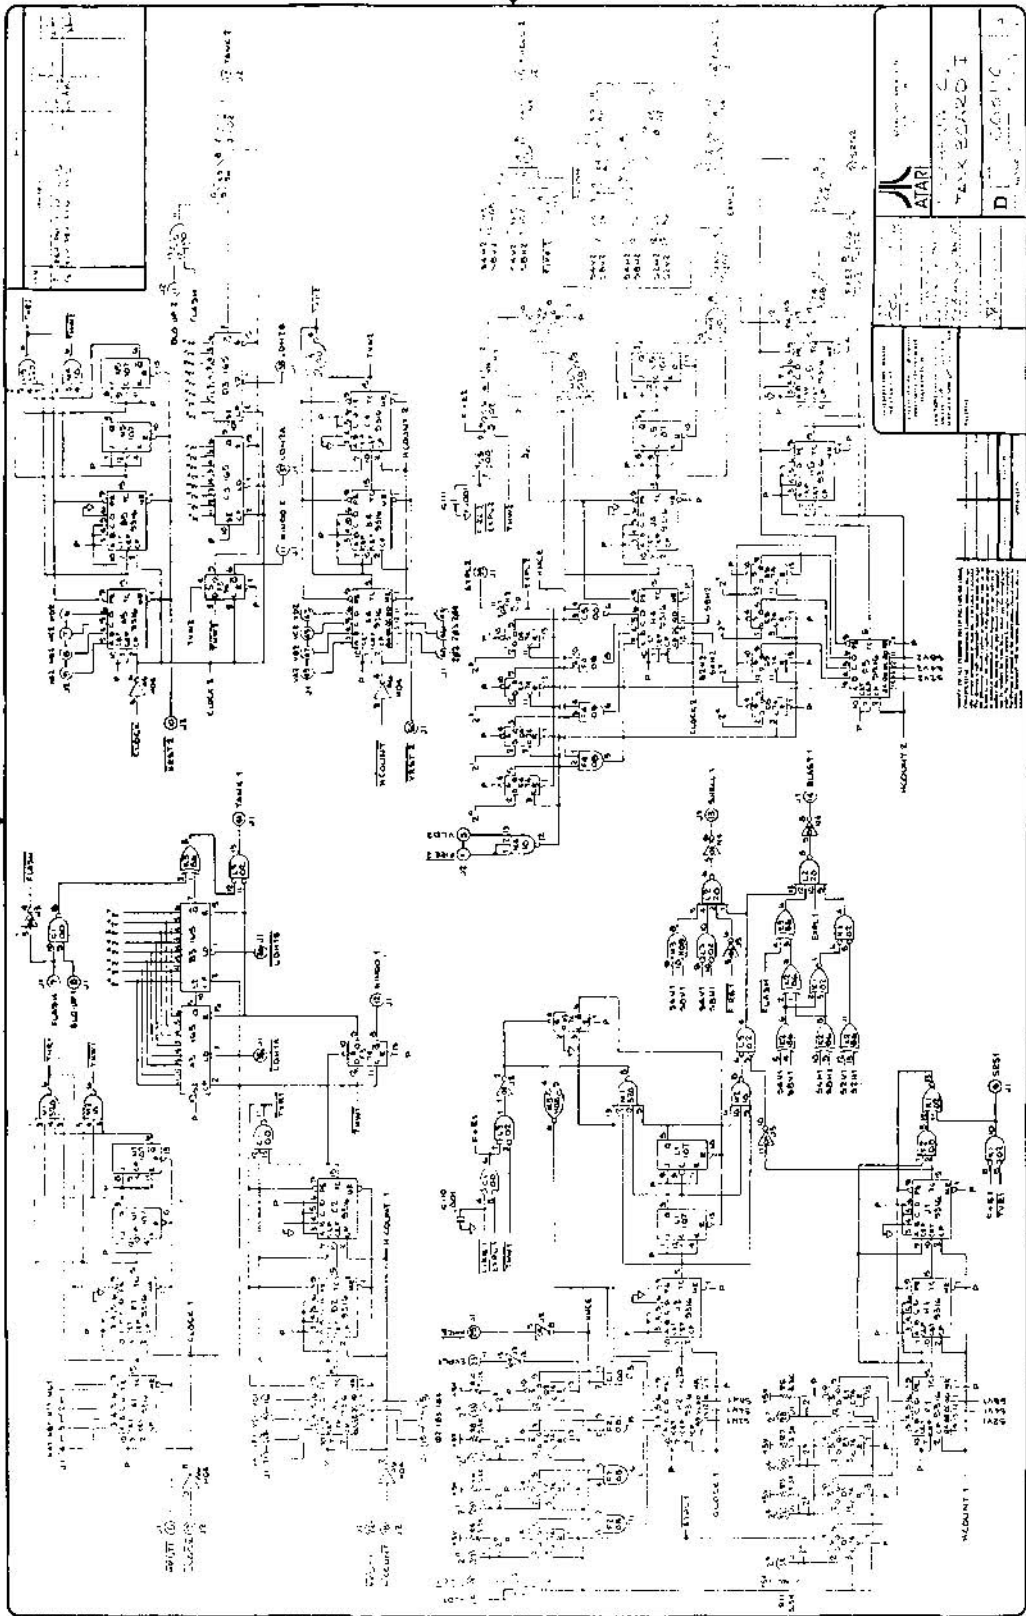


ATARI
 KEYBOARD I
 D. G. GARDNER

REF	DESCRIPTION	VALUE
R1	RESISTOR	10K
R2	RESISTOR	10K
R3	RESISTOR	10K
R4	RESISTOR	10K
R5	RESISTOR	10K
R6	RESISTOR	10K
R7	RESISTOR	10K
R8	RESISTOR	10K
R9	RESISTOR	10K
R10	RESISTOR	10K
R11	RESISTOR	10K
R12	RESISTOR	10K
R13	RESISTOR	10K
R14	RESISTOR	10K
R15	RESISTOR	10K
R16	RESISTOR	10K
R17	RESISTOR	10K
R18	RESISTOR	10K
R19	RESISTOR	10K
R20	RESISTOR	10K
R21	RESISTOR	10K
R22	RESISTOR	10K
R23	RESISTOR	10K
R24	RESISTOR	10K
R25	RESISTOR	10K
R26	RESISTOR	10K
R27	RESISTOR	10K
R28	RESISTOR	10K
R29	RESISTOR	10K
R30	RESISTOR	10K
R31	RESISTOR	10K
R32	RESISTOR	10K
R33	RESISTOR	10K
R34	RESISTOR	10K
R35	RESISTOR	10K
R36	RESISTOR	10K
R37	RESISTOR	10K
R38	RESISTOR	10K
R39	RESISTOR	10K
R40	RESISTOR	10K
R41	RESISTOR	10K
R42	RESISTOR	10K
R43	RESISTOR	10K
R44	RESISTOR	10K
R45	RESISTOR	10K
R46	RESISTOR	10K
R47	RESISTOR	10K
R48	RESISTOR	10K
R49	RESISTOR	10K
R50	RESISTOR	10K
R51	RESISTOR	10K
R52	RESISTOR	10K
R53	RESISTOR	10K
R54	RESISTOR	10K
R55	RESISTOR	10K
R56	RESISTOR	10K
R57	RESISTOR	10K
R58	RESISTOR	10K
R59	RESISTOR	10K
R60	RESISTOR	10K
R61	RESISTOR	10K
R62	RESISTOR	10K
R63	RESISTOR	10K
R64	RESISTOR	10K
R65	RESISTOR	10K
R66	RESISTOR	10K
R67	RESISTOR	10K
R68	RESISTOR	10K
R69	RESISTOR	10K
R70	RESISTOR	10K
R71	RESISTOR	10K
R72	RESISTOR	10K
R73	RESISTOR	10K
R74	RESISTOR	10K
R75	RESISTOR	10K
R76	RESISTOR	10K
R77	RESISTOR	10K
R78	RESISTOR	10K
R79	RESISTOR	10K
R80	RESISTOR	10K
R81	RESISTOR	10K
R82	RESISTOR	10K
R83	RESISTOR	10K
R84	RESISTOR	10K
R85	RESISTOR	10K
R86	RESISTOR	10K
R87	RESISTOR	10K
R88	RESISTOR	10K
R89	RESISTOR	10K
R90	RESISTOR	10K
R91	RESISTOR	10K
R92	RESISTOR	10K
R93	RESISTOR	10K
R94	RESISTOR	10K
R95	RESISTOR	10K
R96	RESISTOR	10K
R97	RESISTOR	10K
R98	RESISTOR	10K
R99	RESISTOR	10K
R100	RESISTOR	10K

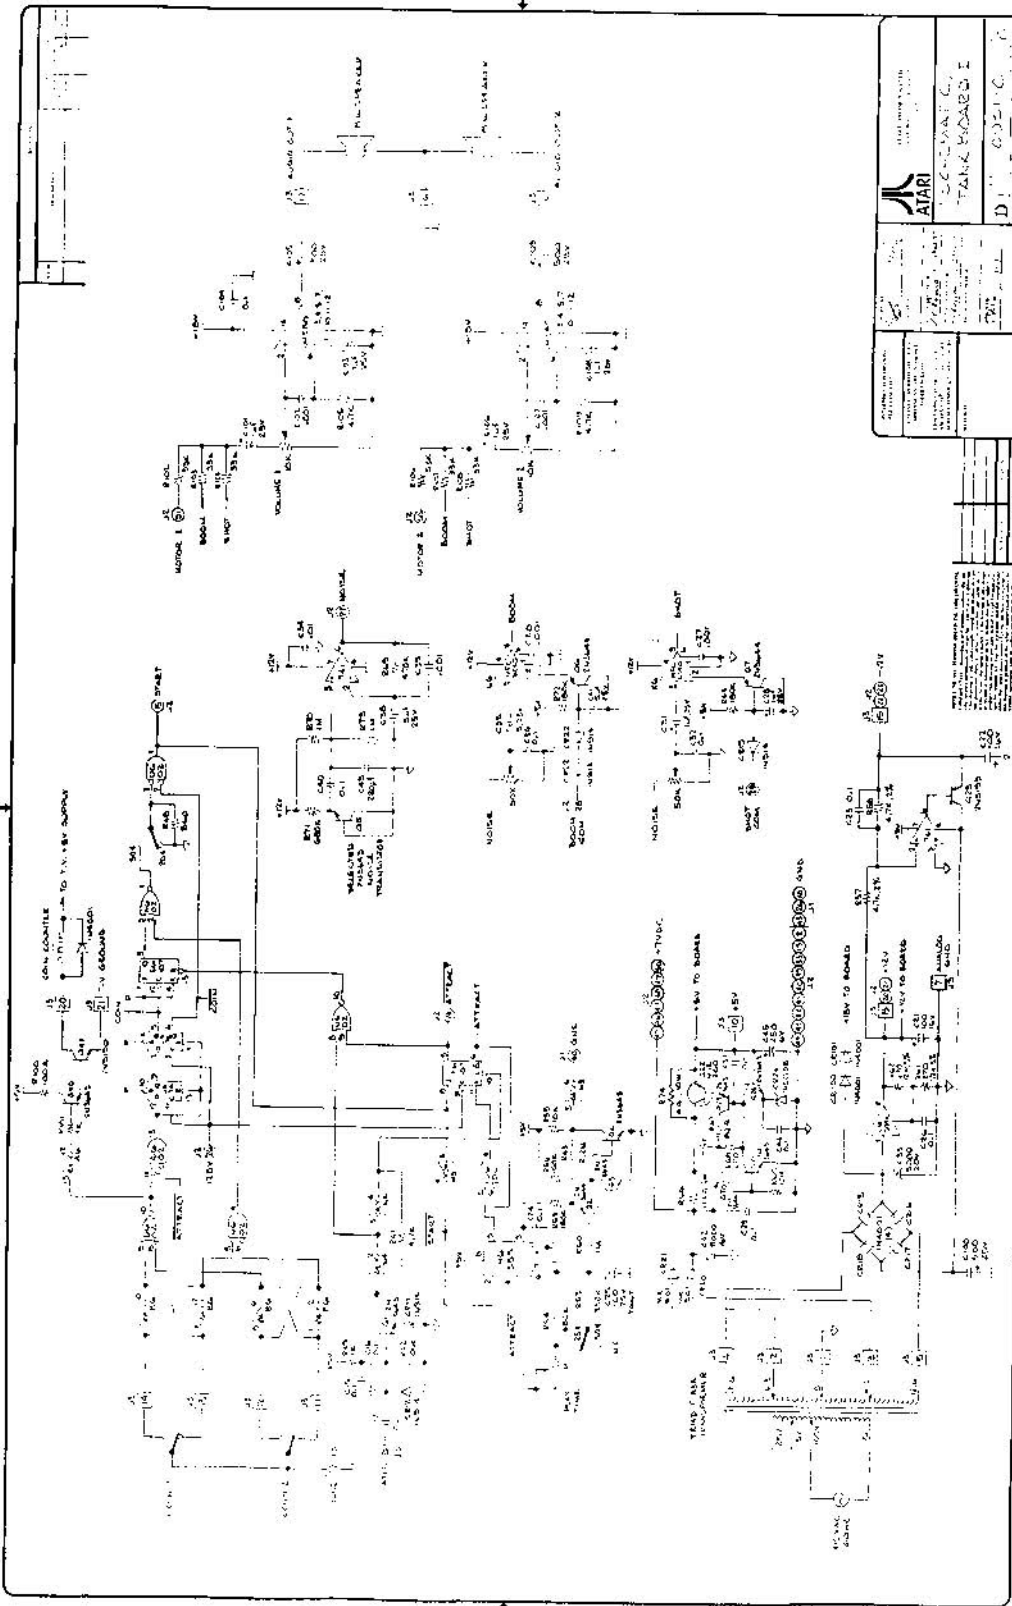


ATARI
 1000 AVENUE OF THE STARS
 BERKELEY, CALIFORNIA 94705
 (415) 841-0000

SCHEMATIC C
TANK MODES I


DATE: 02-10-80
 DRAWN BY: G. J. COLE

REV.	DATE	DESCRIPTION
1	02-10-80	INITIAL DESIGN
2	03-10-80	REVISIONS
3	04-10-80	REVISIONS
4	05-10-80	REVISIONS
5	06-10-80	REVISIONS
6	07-10-80	REVISIONS
7	08-10-80	REVISIONS
8	09-10-80	REVISIONS
9	10-10-80	REVISIONS
10	11-10-80	REVISIONS
11	12-10-80	REVISIONS


NOTE: ALL COMPONENTS ARE TO BE PURCHASED FROM AN ATARI AUTHORIZED DISTRIBUTOR. THE ATARI LOGO IS A TRADEMARK OF ATARI INC. © 1980 ATARI INC.

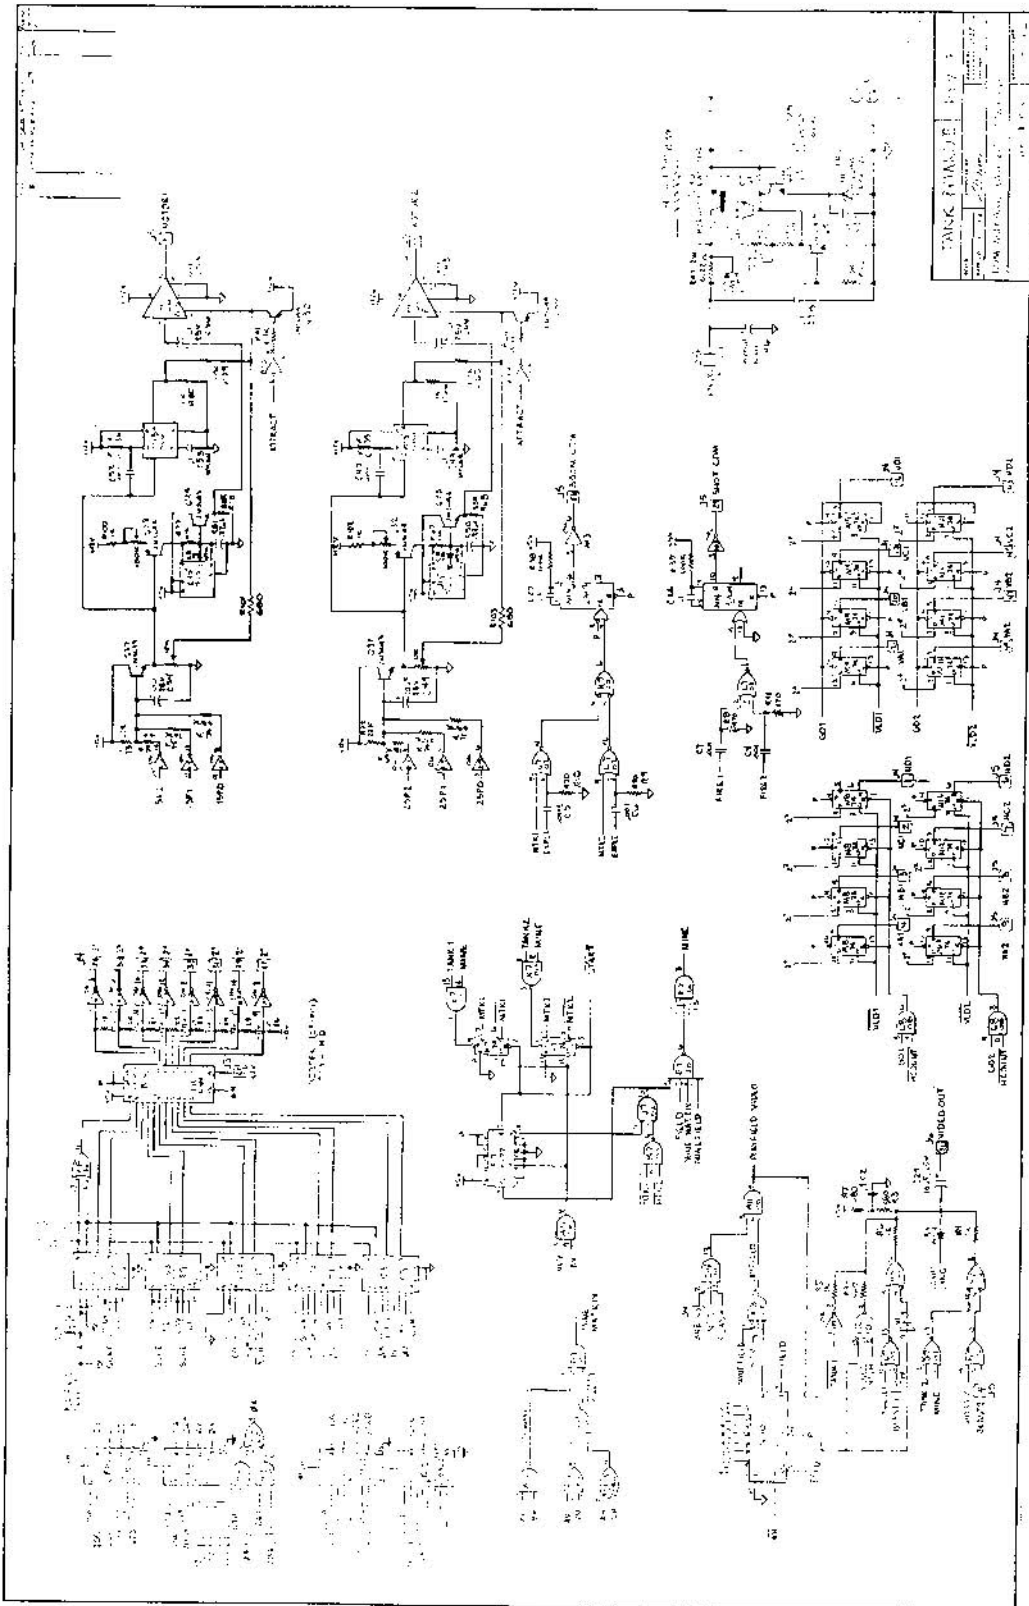

PARK PACKAGE	
DATE	10/1/50
DESIGNED BY	W. H. BROWN
CHECKED BY	J. H. BROWN
APPROVED BY	J. H. BROWN
SCALE	AS SHOWN

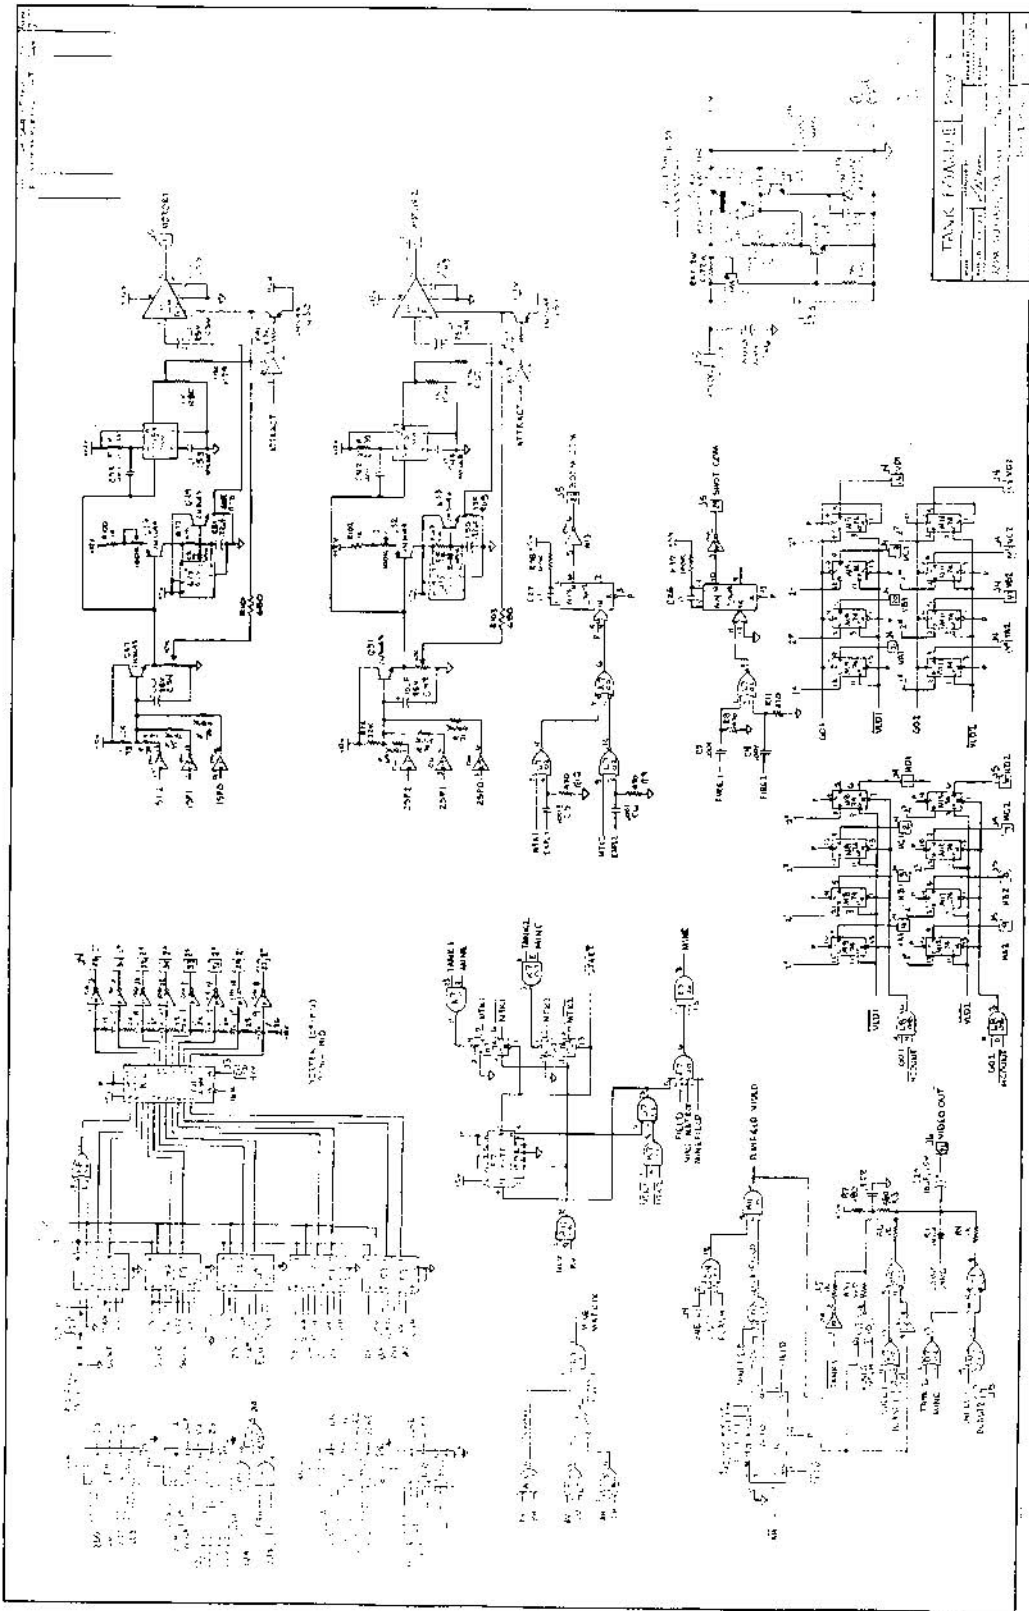

TANK POSITION	
RELAY 1	RELAY 2
RELAY 3	RELAY 4
RELAY 5	RELAY 6
RELAY 7	RELAY 8
RELAY 9	RELAY 10
RELAY 11	RELAY 12
RELAY 13	RELAY 14
RELAY 15	RELAY 16
RELAY 17	RELAY 18
RELAY 19	RELAY 20
RELAY 21	RELAY 22
RELAY 23	RELAY 24
RELAY 25	RELAY 26
RELAY 27	RELAY 28
RELAY 29	RELAY 30
RELAY 31	RELAY 32
RELAY 33	RELAY 34
RELAY 35	RELAY 36
RELAY 37	RELAY 38
RELAY 39	RELAY 40
RELAY 41	RELAY 42
RELAY 43	RELAY 44
RELAY 45	RELAY 46
RELAY 47	RELAY 48
RELAY 49	RELAY 50
RELAY 51	RELAY 52
RELAY 53	RELAY 54
RELAY 55	RELAY 56
RELAY 57	RELAY 58
RELAY 59	RELAY 60
RELAY 61	RELAY 62
RELAY 63	RELAY 64
RELAY 65	RELAY 66
RELAY 67	RELAY 68
RELAY 69	RELAY 70
RELAY 71	RELAY 72
RELAY 73	RELAY 74
RELAY 75	RELAY 76
RELAY 77	RELAY 78
RELAY 79	RELAY 80
RELAY 81	RELAY 82
RELAY 83	RELAY 84
RELAY 85	RELAY 86
RELAY 87	RELAY 88
RELAY 89	RELAY 90
RELAY 91	RELAY 92
RELAY 93	RELAY 94
RELAY 95	RELAY 96
RELAY 97	RELAY 98
RELAY 99	RELAY 100

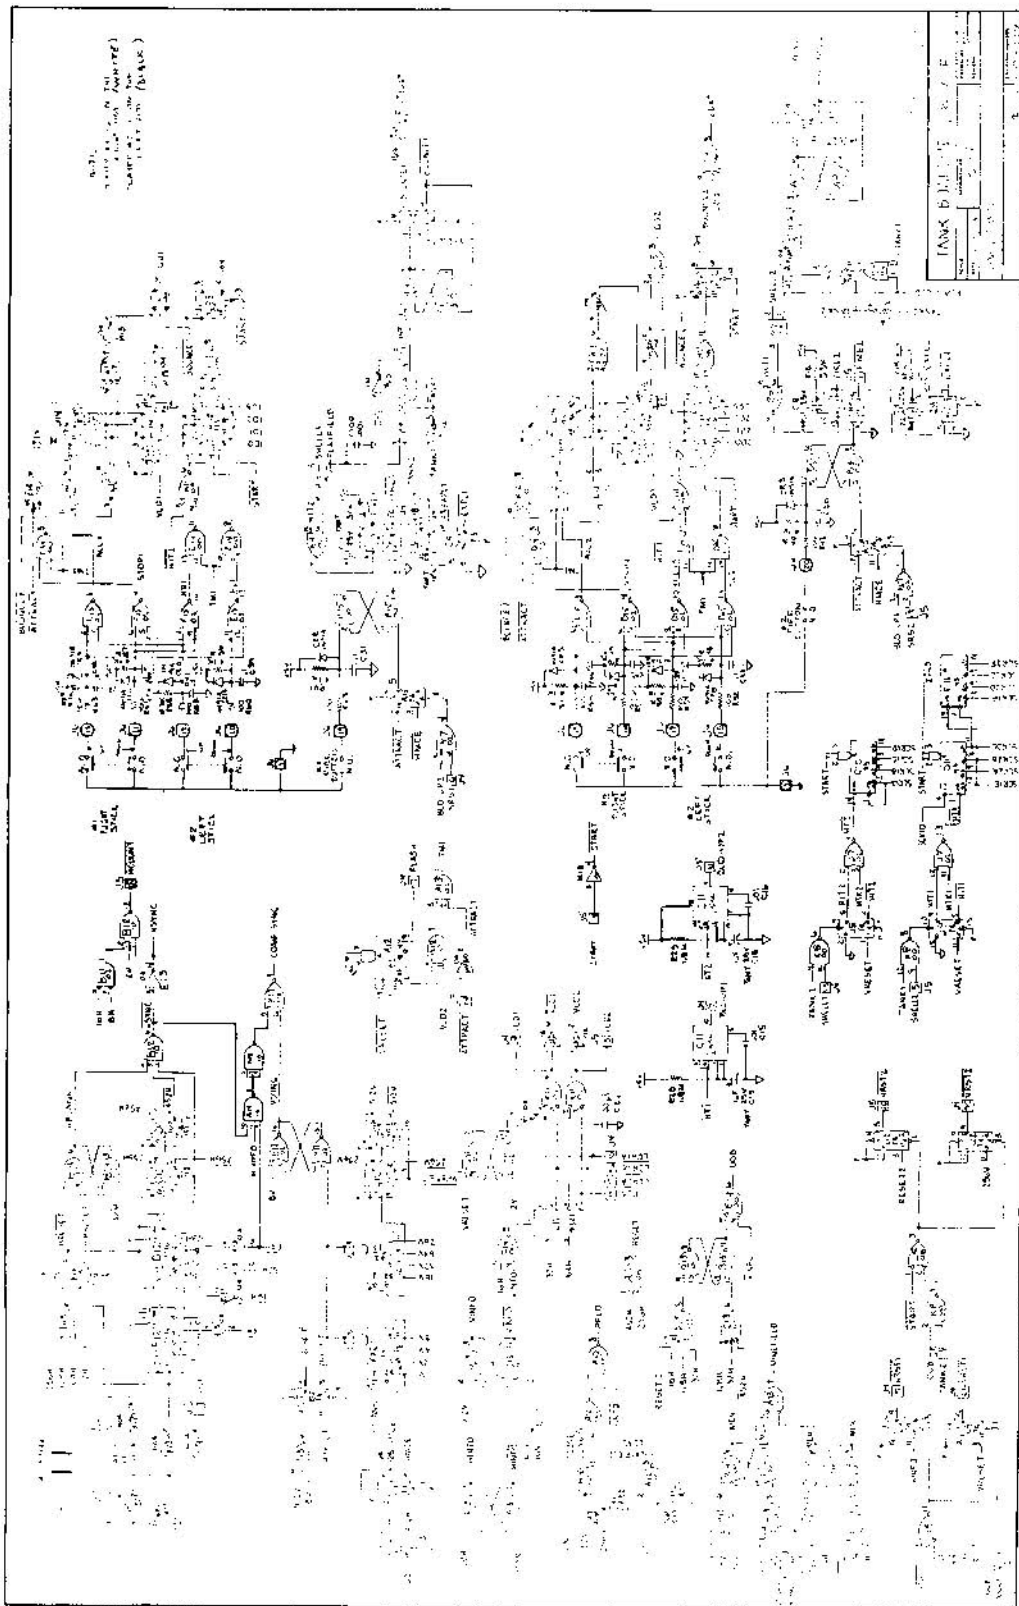

NOTE:
 1. ALL TUBES ARE THE
 STANDARD 6X4 TYPE (BANK)
 EXCEPT WHERE SHOWN
 OTHERWISE.

BANK DESIGN	
DATE	1947
DESIGNED BY	W. J. ...
CHECKED BY	...
APPROVED BY	...
REVISIONS	...

