

SPECIFICATION

- (1) Game Name : Splatter House
- (2) Control Level Switch : 1 (8 direction)
- (3) Button Switch : 2 (attack button 1, jump button 1)
- (4) PC Board : System 1
- (5) PC Board Size : 292x350mm (ROM-PC board)  
292x243mm (CPU-PC board)
- (6) Edge Connector : JAMMA standard(56F edge connector  
3.96mm pitch)
- (7) Monitor direction : Horizontal

CAUTION

- (1) Be sure to turn off power supply when installing or removing the PC board.
- (2) Make sure to apply edge connector which meets JAMMA standard requirements. Remodelling such as sharpening of the PC board will lead to trouble and will be excluded from repairment such as exchange of parts.
- (3) Do not try to submit this machine to conductor inspection by tester. Always take the PC board to your dealer for repair.
- (4) Ensure that there are no foreign objects on the PC Board. A malfunctioning board may be caused by dust, foreign objects, etc. Be sure to clean the board regularly.
- (5) When transporting the PC board, be sure to pack the board with plenty of anti-static packing styrofoam or plastic air bags.

ADJUSTMENT

 
- (1) Connecting the PC board

Connect the PC board to the cabinet's connector (Refer to P5: PC board Connector). Be sure to turn off the power supply of the cabinet.

\*You can enjoy stereo effect by using the cabinet corresponding to stereo.(Refer to P7: Connecting to the cabinet corresponding to stereo).

- (2) Connecting the Control Panel

Referring the below chart, connect attack button(PUSH 1) to the control lever side, and jump button(PUSH 2) to the outside of control lever.

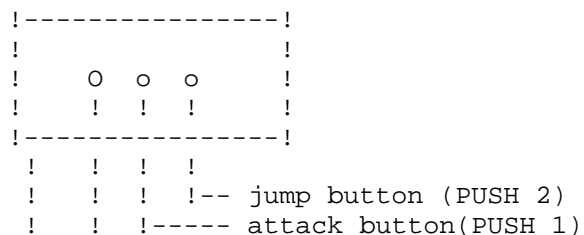

```

! !----- control lever
!----- control panel

```

#### 4. PC BOARD

- (1) Turn on the switch 1 to enter the Test Mode. During the Test Mode the game option settings such as game fees can be exchanged. (Ref- to P2&3) Normally all the switches are in the "OFF" position.

Table 2: Option Switch

```

!-----!-----!-----!-----!-----!-----!-----!-----!-----!-----!
! Item      ! Content  ! 1  ! 2  ! 3  ! 4  ! 5  ! 6  ! 7  ! 8  !
!-----!-----!-----!-----!-----!-----!-----!-----!-----!
!           !           !           Always OFF
!-----!-----!-----!-----!-----!-----!-----!-----!-----!
! Test Switch ! Normal  ! OFF !    !    !    !    !    !    !
!           ! Test mode ! ON  !    !    !    !    !    !
!-----!-----!-----!-----!-----!-----!-----!-----!-----!

```

- (2) Adjusting Volume

The original settings can be used if there are no problems

##### 1) Sound Volume

Turn it right to turn up the volume.

##### 2) Balance Knob (BAL)

It adjusts the balance of both right and left sound volume when using the stereophonic sound system. In case of monophonic sound system, sound might not be heard if you turn it right. The center position is the standard setting.

##### 3) Tone Controlling

Knob (BASS/TRBL). Enjoy various tone quality effect by adjusting it. The center position is the standard setting.

Table 1: Game Option Settings

```

!-----!-----!-----!-----!-----!-----!-----!-----!-----!
! Item      ! Content  ! Type A  !-----!-----!
! 1 Game Fee ! coin    ! 1~9 (default 1) ! 2P O !
!   Coin 1   !-----!-----!-----!-----!-----!
!           ! credit  ! 1~9 ( -ditto- ) !    !
!-----!-----!-----!-----!-----!-----!-----!-----!-----!
! 2 Game Fee ! coin    ! 1~9 ( -ditto- ) !  !Screen !
!   Coin 2   !-----!-----!-----!-----!-----!
!           ! credit  ! 1~9 ( -ditto- ) ! 1P O !
!-----!-----!-----!-----!-----!-----!-----!-----!-----!
! 3 Attract  !>Sound  ! Type B  !-----!-----!
!   sound    ! OFF     !-----!-----!-----!-----!-----!
!-----!-----!-----!-----!-----!-----!-----!-----!-----!
! 4 Cabinet  !>A (Type A) !  !Screen !
!   (ref to  ! B (Type B) !  !Screen !
!   pict)    ! C (Type C) !  !-----!-----!
!-----!-----!-----!-----!-----!-----!-----!-----!-----!
! 5 Flip     !>OFF     ! 1P O 2P O !
!   (1p side) ! ON       !-----!-----!

```

```

!-----!-----!
! 6 Difficulty!>A (standard)      ! Type C      !-----! !
!             ! B (EASY)         !             ! !-----! ! !
!             ! C (HARD)         !             ! !-----! ! !
!-----!-----!-----!-----! ! Screen ! ! !
! 7 Extended  !>30000, 70000, 50000 Every ! !-----! ! !
!   play      ! 50000,100000,100000 Every ! !-----! ! !
!             ! NOTHING          !             !   O   ! !
!             !             !             ! --1P-&-2P--! !
!-----!-----!-----!-----!

```

(5) Switch Test, Sound Test, Cross Hatch Pattern, Color Tone

Press the service switch when the game option screen is shown:  
 4 kinds of test screens then appear sequentially. After  
 the test is over, turn off the test switch. It will cause to  
 return to the game screen.