

 


INSTRUCTIONS

CAPCOM

● INSTRUCTION



- CRT MONITOR
HORIZONTAL SCREEN
- CONTROL PANEL

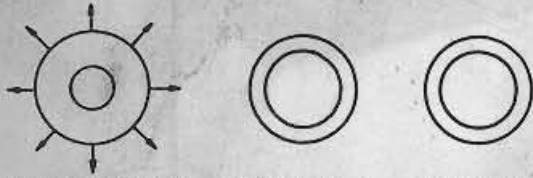

8-WAY LEVER BUTTON 1 BUTTON 2

BUTTON 1 FIRE AND DROP BOMBS
 BUTTON 2 TURN THE PLAYER RIGHT
 OR LEFT

  POSITION OF DIP SWITCH

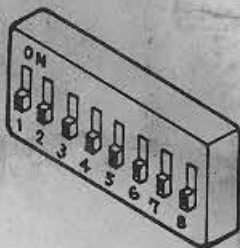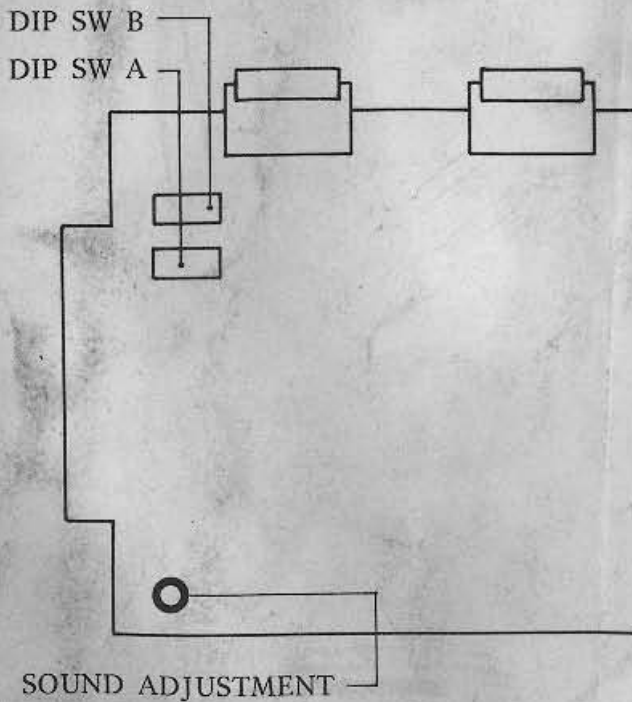

DIP SW.

SOLDER SIDE			COMPONENT SIDE		
GND	A	1	GND		
GND	B	2	GND		
+5	C	3	+5		
+5	D	4	+5		
Ⓞ	E	5	Ⓜ		
SYNC	F	6	Ⓟ		
GND	H	7	GND		
		J	8		
2P		SHOT 2	K	9	SHOT 2
		SHOT 1	L	10	SHOT 1
		UP 1	M	11	UP 1
		DOWN 1	N	12	DOWN 1
		LEFT 1	P	13	LEFT 1
		RIGHT 1	R	14	RIGHT 1
		1P		GND	S
2P SELECT	T			16	1P SELECT
	U			17	
COIN 2	V			18	COIN 1
GND	W			19	GND
	X			20	
	Y			21	
+12 V	Z	22	+12 V		
COUNTER 2	a	23	COUNTER 1		
SP ⊖	b	24	SP ⊕		
+12	c	25	+12		
GND	d	26	GND		
GND	e	27	GND		
GND	f	28	GND		

- CONNECTOR
 CR7E-56DA-3.96E (HIROSE)
 OR
 1168-056-009 (KEL)

CAPCOM CO., LTD.

17-10, KABUKI-CHO 2-CHOME, SHINJUKU-KU, TOKYO
PHONE: (03) 205-0231, FAX: (03) 207-3739, TLX: 2322886
CAPCOM

CAPCOM USA INC.

1283-C MOUNTAIN VIEW/ALVISO ROAD SUNNYVALE CA 94089
PHONE: (408) 745-7081, TELEX: 797604 CAPCOM,
FAX: (408) 745-7920