

SPORTS ARENA

SERVICE BULLETIN


NEW TILT KIT (Plum Bob Style) Available !

NEW TILT KIT includes:

- * Plum Bob TILT ASSY x 1 set


How to replace NEW TILT

1) Remove the Old TILT ASSY from Cabinet. Refer to picture below:

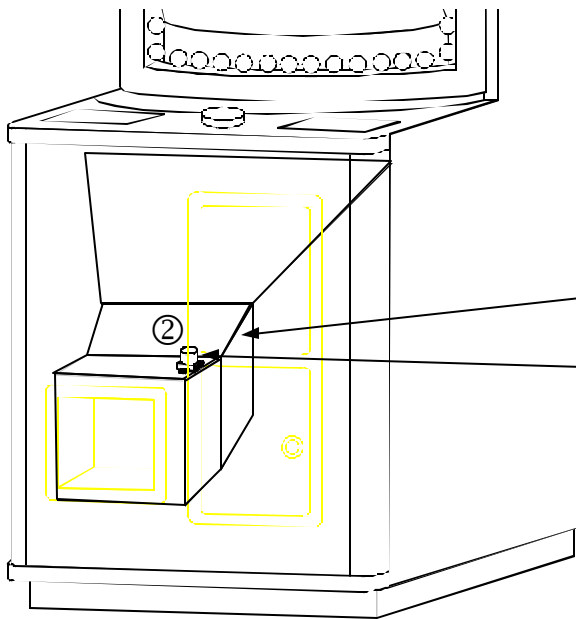


FRONT INSIDE VIEW OF CABINET


- 1 Open the Coin Door.
- 2 Old TILT ASSY is mounted on top of Prize Chute.
- 3 Take off 2 Wire Harnesses from Old TILT ASSY. (Wire colors are BLK and WHT)
- 4 Take off the 2 of screws to remove the Old TILT ASSY from cabinet.

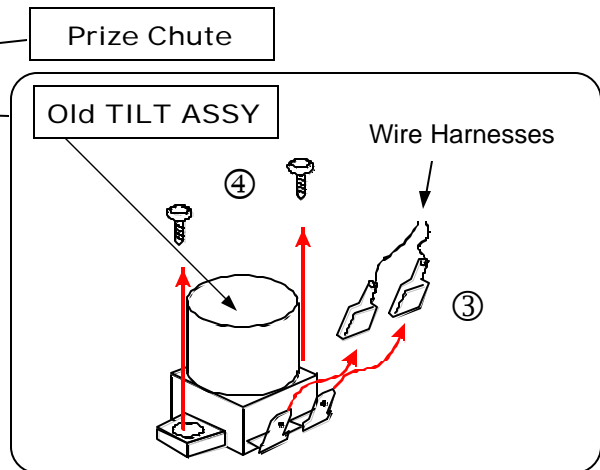

- 2) Open Bottom Back Door of cabinet. Mount NEW Plum Bob TILT ASSY to Back of Prize Chute. Refer to picture below:

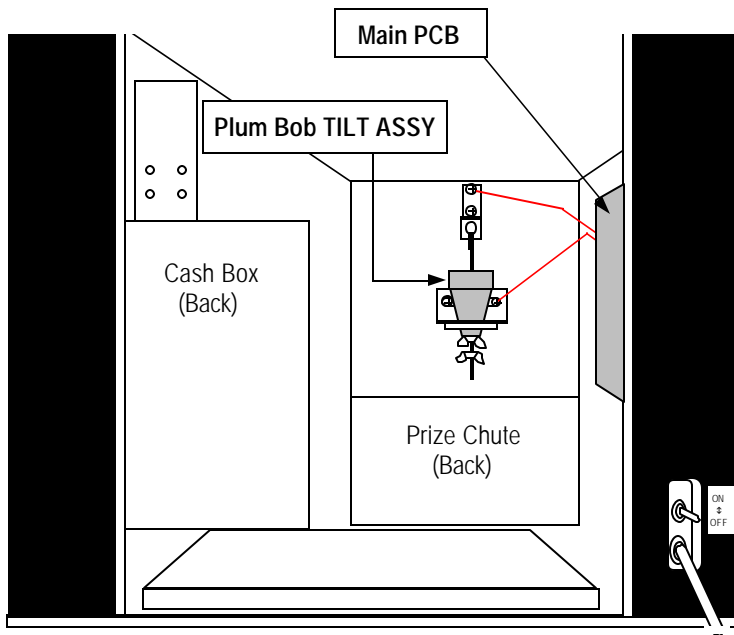


BACK BOTTOM INSIDE VIEW OF CABINET

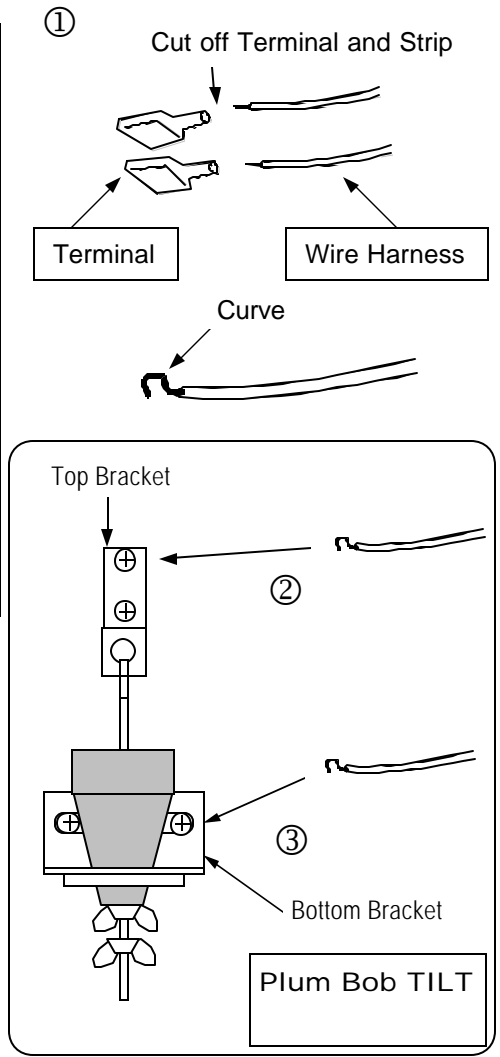

- 1 Cut off the terminal of Original TILT Wires and strip about 1/4".
- 2 Tighten either wire around top screw on Top Bracket. (Wire color does not matter.)
- 3 Tighten other wire around bottom screw on Bottom Bracket. (Wire color does not matter.)

3) Exchange Program EP-ROM to Ver. 1.04. (Refer to next page.)

- 1 Main PCB is mounted on Right side of cabinet.
- 2 Remove Old EP-ROM (Ver. 1.01 to 1.03) and mount NEW EP-ROM Ver. 1.04.

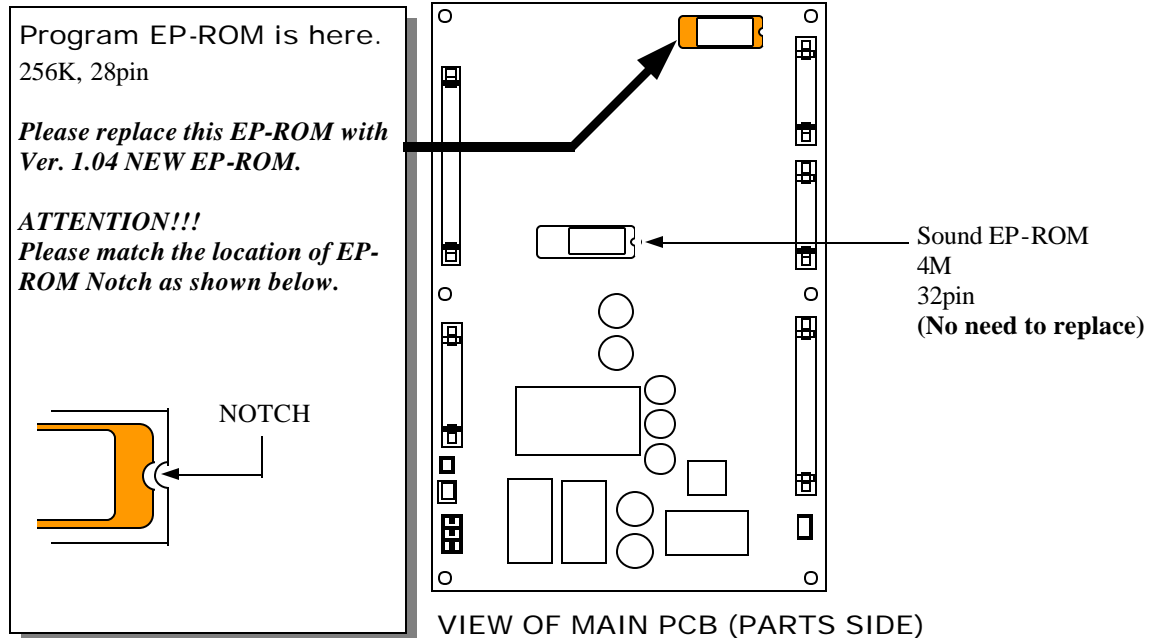

After exchanging the EP-ROM, please do the following to reset the MAIN PCB:

- Press and hold the SERVICE CREDIT SWITCH then re-power on the game. Continue to Press and hold the SERVICE CREDIT SWITCH until attract sound comes on.

By doing the above, you reset the PCB to accept the NEW EP-ROM.

NOTE 1: *You will have to re-set up some Settings in the setting mode again. Specifically pertaining to Winability and Lamp speed (See manual setting table.)*

NOTE 2: *Make sure game is level !*