

EXPANDS THE WORLD OF PLAY

UNIVERSALLADY BUG UPRIGHT REPLACEMENT PARTS LISTDOOR ASSEMBLY PARTS

<u>UNI. PART #</u>	<u>DESCRIPTION</u>	<u>DISTRIBUTOR PRICE</u>
31-10001	Coin Door (Complete)	80.00
31-10015	Coin Door & Frame	35.00
28-10003	Coin Door Lock & Key	6.00
31-10016	Coin Return Tray	3.50
31-10007	Coin Slot	1.50
31-10009	Coin Slot Chute	3.00
31-10010	Coin Slot Chute Holder	1.00
27-10002	Rejector	10.00
34-10044	Coin Indication Panel	1.00
31-10003	Coin Reject Button	3.00
31-10017	Bearing	1.00
31-10018	Transmission Shaft	2.50
32-10029	Rotary Bracket	1.50
31-10004	Rejector Bracket	2.00
31-10005	Rejector Case	3.00
31-10011	Sensor Slot	1.00
20-10018	Micro Switch (Rejector)	3.00
25-10001	Miniature Lamp	.50
25-10012	Miniature Lamp Socket	.50
31-10006	Lamp Bracket	1.00
20-10013	Slam Switch With Holder	2.00

LEVER ASSEMBLY PARTS:

<u>UNI. PART #</u>	<u>DESCRIPTION</u>	<u>DISTRIBUTOR PRICE</u>
30-10033	4-way Control Lever Ass'y (Blade)	25.00
30-10011	Knob	2.00
30-10009	Resin Board	1.50
30-10005	Lever Shaft	3.00
30-10029	Returning Ring (C Type)	.25
45-10079	Flat Washer	.25
30-10025	Detecting Disc	2.00
30-10014	Steel Ball	1.00
45-10087	Lock Nut	.25
30-10017	Bracket (A)	3.00
30-10019	Bracket (B)	3.00
30-10043	Mounting Plate for Blade Switches	5.00
30-10044	Plate Spring	.50
30-10045	Insulating Fiber	.50
20-10015	Blade Switch	2.00
30-10026	Mounting Base	5.00

PRICES SUBJECT TO CHANGE WITHOUT NOTICE**UNIVERSAL U.S.A., INC.**

UNIVERSALLADY BUG UPRIGHT REPLACEMENT PARTS LISTOUTSIDE CABINET PARTS:

<u>UNI. PART #</u>	<u>DESCRIPTION</u>	<u>DISTRIBUTOR PRICE</u>
90-10018	Control Panel Assembly	\$80.00
32-10001	Top Title Panel Fixture	7.00
32-10002	Bottom Title Panel Fixture	7.00
34-10069	Title Plex (Green)	15.00
34-10067	Illustrated Plex (B)	20.00
34-10068	Illustrated Plex (A)	40.00
34-10066	Title Plex (Purple)	15.00
34-10059	Smoke Plex	7.00
34-10071	Operating Indication Panel	15.00
34-10070	Game Rules Panel	10.00
32-10012	Cash Box Door	25.00
28-10001	Cash Box Door Lock & Key	5.00
41-10007	Cash Box	7.50
28-10002	Back Door Lock & Key	5.00
41-10002	Caster	5.00
20-10009	Push Button (Player 1 & 2)	1.00
20-10008	Push Button Housing	.25

INSIDE CABINET PARTS:

<u>UNI. PART #</u>	<u>DESCRIPTION</u>	<u>DISTRIBUTOR PRICE</u>
25-10002	Flourescent Lamp	3.00
25-10004	Lamp Holder (Pair)	3.00
29-10001	Speaker	5.00
20-10015	Blade Switch (Player 1 & 2)	2.00
25-10001	Miniature Lamp	.50
20-10013	Slam Switch	2.00
20-10023	Micro Switch (Reset)	3.00
20-10005	Interlock Switch	3.00
20-10014	Toggle Switch	5.00
20-10004	Micro Switch (degause)	3.00
26-10001	Coin Counter	10.00
38-10003	Switching Power Supply HSA-122B	60.00
38-10001	Power Supply PCB	60.00
37-10006	Power Supply Trans. Ass'y.	40.00
36-10001	CRT-19VLBP22 (20")	125.00
36-10047	Monitor Chassis CM-F20U	200.00
36-10003	Monitor Chassis 4S/20B	240.00
36-10006	CRT-510LCB22 (20")	270.00
36-10046	Monitor Chassis PWK-065	170.00
36-10009	CRT-510UKB22	250.00
36-10044	Monitor Chassis D203-C	240.00

PRICES SUBJECT TO CHANGE WITHOUT NOTICE**UNIVERSAL U.S.A., INC.**