

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

OWNER'S MANUAL

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

Sindbad Adventure

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

Big Bear Pachislo Shop

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

©Copyright 2005
by

Gaku Kinoshita

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

Big Bear Pachislo Shop


www.bigbearpachisloshop.com

Big Bear Pachislo Shop

Safety Information



Set up the machine on a stable base and nail it to both the base and the wall behind. The machine may tumble forward when you open the front door -- the front door can be very heavy with tokens accumulated in the token tray.

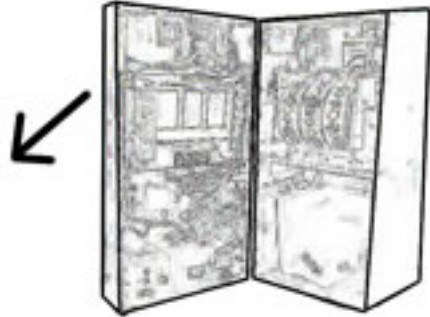

Unplug the power cable when the machine is not in use.

To prevent an electric shock, do not open the operating console or uncover the plastic sheet on the computer motherboards.

Do not use the machine near electric devices such as radios, TV sets, computers, and computer related devices.

Do not use the machine near water or heat sources such as a radiator and a stove.

Contact Information

If you have questions or requests about the machine or this manual, please contact us at:
service@bigbearpachisloshop.com

We update information on your pachislo machines at our website:
www.bigbearpachisloshop.com

Our mailing/shipping address is:
Big Bear Pachislo Shop or GAK Trading, Inc.
16505 N. Interstate 45 Willis, TX 77318

Legal Information

We merchandise pachislo machines purely as toys. We believe that pachislo machines are legal in most states in the U.S. as long as they are used solely for a home amusement purpose. All our products are playable only with no valued-tokens.

You must understand that using pachislo machines for profit or gambling purposes is illegal and can subject you to severe penalties. Also, you must not use pachislo machines in a public establishment, such as a restaurant or bar, without checking with your lawyer or local district attorney.

We are not responsible for our products used for other than home entertainment, or for our machines that have been altered or relocated to a state whose regulations limit the gaming machine ownership. You, if executing any activity deemed illegal in your state, will hold us harmless and defend us at your expense any and all adverse claims made against us.

Big Bear Pachislo Shop

Big Bear Pachislo Shop

Things in the Package

The package includes the following things:

- (1) A Pachislo Machine
- (2) An Owner's Manual
- (3) A Door Key
- (4) A Payout Rate Changing Key (placed in the payout rate changer)
- (5) 250 Tokens

Getting Started

Step 1: Make sure you do not have any crack in the token tray and the front panel. If you do, contact us immediately for replacement. Note: Some wears or scratches might be evident on your machine due to previous use. In spite of our thorough refurbishing, some marks may still remain.

Step 2: Open the front door with a door key. Take out the power cable through a hole in the back and plug it in.

Step 3: Push the hopper all the way to the back. Put half a bag of tokens into the hopper.

Step 4: Turn the power switch on. Close the front door. Insert tokens into the Token Slot. Make sure the Credit Counter start counting from the fourth token you put.

Step 5: Begin to play!! Please don't forget to nail your machine securely to the base and the wall behind.

Description of the Machine

Please read the following description, seeing photos on next page. The best way is to try and see how each part works.

Outside

1. Reel Stop Buttons
2. Spin Knob
3. Cash-out Button: This button has two functions. First, you can cash out your credits by pushing this button whenever you want. Second, you can change the game mode from "cash" to "credit," or vice versa. When the machine is in a "credit" mode, you store up to 50 credits in the machine. If it is in a "cash" mode, you have to insert tokens every time you play games. You can switch the modes by pushing the button -- when it is in a credit mode, a credit counter illuminates.
4. 1 or 2 Bet Button: This button bets 1 or 2 credits.
5. Max Bet Button: You make a max-bet of 3 tokens with this button.
8. Bonus Game Counter: When you hit a Regular or a Big Bonus, this counter turns on and shows you how many bonus games are coming.
9. Bet Indicators: These lights show how many tokens you have betted.
10. Payout Counter: This shows the amount of tokens you win.
11. Credit Counter: This shows the amount of your credits. You store up to 50 credits. When you have more than 50 credits, the machine cashes out exceeded credits automatically.
12. Game Indicator: From left to right -- Insert Token; Start Spinning; Wait; Replay; and Win.
16. Record Review Buttons. For detail, go to our website, the section "Support."

Inside

1. Reset Button
2. Power Switch
3. Hopper: You must turn off the machine when you pull out the hopper.
4. Payout Rate Changer
5. Fuse

Big Bear Pachislo Shop

Big Bear Pachislo Shop

OUTSIDE

- 8. Bonus Game Counter
- 9. Bet Indicator
- 10. Payout Counter
- 11. Credit Counter
- 1. Reel Stop Buttons
- 2. Spin Knob
- 3. Cash-out Button
- 4. 1 or 2 Bet Button
- 5. Max Bet Button
- 6. Token Tray
- 13. Token Slot
- 14. Clear Button
- 15. Door Key Hole
- 16. Record Review Buttons

www.bigbearpachisloshop.com

www.bigbearpachisloshop.com

www.bigbearpachisloshop.com

INSIDE

- 1. Reset Button



Volume Controller



2. Power Switch 3. Hopper



4. Payout Rate Changing Key

Big Bear Pachislo Shop

Big Bear Pachislo Shop

Refilling the Hopper

1. Open the front door.
2. Put tokens in the hopper.
3. Close the front door and the turn the door key left (counter-clockwise) or push the reset button. (Be ready for tokens coming out!)
4. Close the front door.

Reset: Turn the door key counter-clockwise and push the reset button

Whatever problem you have, such as an empty hopper and a token jam, once you fix it, you have to reset the machine by two actions -- turning the door key counterclockwise and pushing the reset button. An error display remains until you reset the machine.

Error Message

When your machine has a problem, it indicates an error message so that you can know the problem. Error codes are the following:

HE: A hopper is empty. Refill the hopper.

HJ: A hopper is jammed. Turn off your machine, remove the hopper, and take out all the tokens.

CE: A token slot is jammed. Push a button at the token slot.

CJ: A token slot is jammed. Push a button at the token slot.

Changing Payout Rates -- Payout Rate Changer

(Your machine is set at Level 6 -- the highest payout rate)

1. Turn off the power switch.
2. Turn the payout rate changing key clockwise into the horizontal position.
3. Turn on the power switch.
4. Make sure the credit counter indicates <1> -- <6>.
5. Push the payout rate changing button and set the payout level.
6. Pull down the spin knob.
7. Turn the key back to the vertical position.

Payout Rates (Rates for 1,000 tokens invested) and Rates of Big and Regular Bonuses

Level	Big Bonus	Reg Bonus
1	1/437.4	1/1012.3
2	1/400.7	1/930.9
3	1/375.0	1/908.3
4	1/353.6	1/850.5
5	1/330.6	1/791.4
6	1/314.8	1/709.8

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

Big Bear Pachislo Shop

www.bigbearpachisloshop.com

Big Bear Pachislo Shop

It is not a Malfunction: You may have the following situations, but they are not problems.

www.bigbearpachisloshop.com

(1) The reels don't start spinning.

You have to bet three credits/tokens to spin the reels. When you bet one or two credits/tokens, the reels don't spin.

(2) Tokens do not come out when I win.

Tokens are credited up to 50 when you play in a credit mode. Only when your credits are more than 50, your machine cashes out tokens. If you want to cash out immediately, push the cash-out button.

www.bigbearpachisloshop.com

(3) Reels do not start at the moment I hit the spin knob.

Your machine takes an interval of a few seconds between games. When you play faster than this interval, reels do not respond to your command. In such case, the wait light is on, letting you know the machine is taking an interval.

(4) Tokens do not register, falling into the token tray.

The token slot is jammed -- Push the clear button.

Or, the machine is in the "cash mode." Push the cash-out button once, then, insert tokens. Make sure the credit counter is on.

www.bigbearpachisloshop.com

(5) The machine doesn't work.

Push the reset button. Every time you fix a token jam or refill the hopper, you have to reset the machine.

Or, an payout rate changer is on. You have to reset the payout rate (see "Changing Payout Rates" in the previous section). As long as the credit counter indicates payout levels <1>-<6>, the machine does not play.

Big Bear Pachislo Shop

Trouble Shooting

www.bigbearpachisloshop.com

The machine has no power.

First, make sure the machine is plugged in, and the power switch is turned on.


Second, make sure the outlet has electricity. Try another appliance at the same outlet.

Third, unplug the machine and check the fuse.

Big Bear Pachislo Shop

I locked in the door key.

Your machine has a hole (2-3 inches in diameter) on the bottom or the back. You stick your hand in the hole and release the latch. Here is how to do it. Lay down your machine and peek the inside with a flashlight. Make sure where the latch is -- it is in a hook-shape and located 6-8 inches below the key cylinder. You release the latch by pulling it down. It is supposed to unlatch with a little pressure on it. If you put much of pressure and don't open the door, you are at a wrong place. Do it over again.

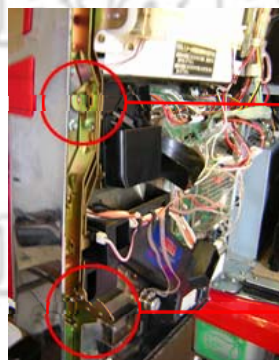

Key Cylinder

Latch

Support

When you have any problems, please contact us via a phone or e-mail. If you would like the latest information about your machine, please visit our website.

Big Bear Pachislo Shop

www.bigbearpachisloshop.com