



Gun Dealer

DOOYONG

WIRING DIAGRAM

SOLDER SIDE			COMPONENT SIDE
GND	A	1	GND
GND	B	2	GND
+5 V	C	3	+5 V
+5 V	D	4	+5 V
-5 V	E	5	-5 V
+12 V	F	6	+12 V
	H	7	
COIN COUNTER2	J	8	COIN COUNTER1
	K	9	
SP (-)	L	10	SP (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
START SW 2	U	17	START SW 1
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SHOOT 1	Z	22	1P SHOOT 1
2P SHOOT 2	a	23	1P SHOOT 2
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

CONTROL PANEL

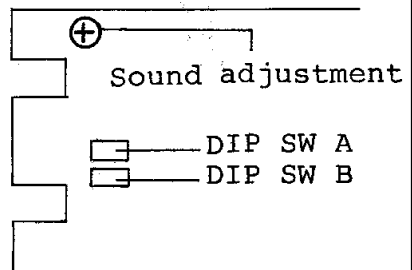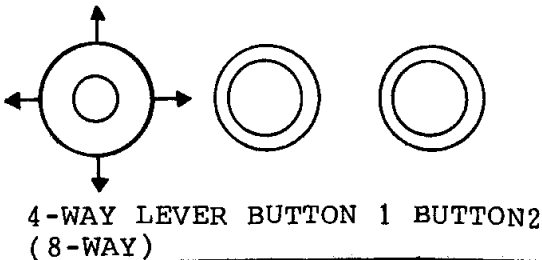

DIP SWITCH A	1	2	3	4	5	6	7	8
VERY EASY EASY DIFFICULT MORE DIFFICULT					OFF	OFF		
					OFF	ON		
					ON	OFF		
					ON	ON		
TABLE TYPE		OFF						
UP RIGHT TYPE		ON						
SCREEN NORMAL	OFF							
INVERSION REVERSE	ON							

DIP SWITCH B		1	2	3	4	5	6	7	8
C O I N A	1COIN 1PLAY						OFF	OFF	OFF
	1 2						OFF	OFF	ON
	1 3						OFF	ON	OFF
	1 4						OFF	ON	ON
	2 1						ON	OFF	OFF
	3 1						ON	OFF	ON
	4 1						ON	ON	OFF
	5 1						ON	ON	ON
C O I N B	1COIN 1PLAY			OFF	OFF	OFF			
	1 2			OFF	OFF	ON			
	1 3			OFF	ON	OFF			
	1 4			OFF	ON	ON			
	2 1			ON	OFF	OFF			
	3 1			ON	OFF	ON			
	4 1			ON	ON	OFF			
	5 1			ON	ON	ON			



DOOYONG IND. CO., LTD.

ADD : 91-11, KARAK-DONG, SONGPA-GU, SEOUL, KOREA
C.P.O. BOX 4493 SEOUL, KOREA
TEL : (02) 448-6831~6
FAX : (02) 406-8839
TLX : DOOYONG K26206