


# FLASH POINT (833-7121-~)

COIN/CREDIT OPTION SWITCH SETTING	DIP SW #1					
	1	2	3	4	5	6
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDITS	ON	OFF	OFF	OFF	OFF	OFF
1 COIN 3 CREDITS	ON	ON	OFF	OFF	OFF	OFF
1 COIN 4 CREDITS	ON	ON	ON	OFF	OFF	OFF
1 COIN 5 CREDITS	ON	ON	ON	ON	OFF	OFF
1 COIN 6 CREDITS	ON	ON	ON	ON	ON	OFF
2 COINS 1 CREDIT	OFF	ON	ON	OFF	OFF	OFF
2 COINS 1 CREDIT	ON	ON	ON	OFF	OFF	OFF
2 COINS 2 CREDITS	ON	ON	ON	ON	OFF	OFF
2 COINS 2 CREDIT	OFF	ON	ON	ON	ON	ON
2 COINS 3 CREDITS	OFF	ON	ON	ON	ON	ON
2 COINS 4 CREDITS	OFF	ON	ON	ON	ON	ON
2 COINS 1 CREDIT	ON	ON	ON	ON	ON	ON
2 COINS 2 CREDITS	ON	ON	ON	ON	ON	ON
2 COINS 3 CREDITS	ON	ON	ON	ON	ON	ON
2 COINS 4 CREDITS	ON	ON	ON	ON	ON	ON
2 COINS 5 CREDITS	ON	ON	ON	ON	ON	ON
2 COINS 6 CREDITS	ON	ON	ON	ON	ON	ON
1 COIN 1 CREDIT	ON	OFF	ON	ON	ON	ON
2 COINS 2 CREDITS	ON	OFF	ON	ON	ON	ON
3 COINS 3 CREDITS	ON	ON	ON	ON	ON	ON
4 COINS 4 CREDITS	ON	ON	ON	ON	ON	ON
5 COINS 5 CREDITS	ON	ON	ON	ON	ON	ON
1 COIN 1 CREDIT	ON	ON	ON	ON	ON	ON
2 COINS 1 CREDIT	ON	ON	ON	ON	ON	ON
2 COINS 2 CREDITS	ON	ON	ON	ON	ON	ON
2 COINS 3 CREDITS	ON	ON	ON	ON	ON	ON
2 COINS 4 CREDITS	ON	ON	ON	ON	ON	ON
2 COINS 5 CREDITS	ON	ON	ON	ON	ON	ON
2 COINS 6 CREDITS	ON	ON	ON	ON	ON	ON
FREE PLAY	ON	ON	ON	ON	ON	ON

OPTION SWITCH SETTING	DIP SW #2							
	1	2	3	4	5	6	7	8
NOT USED	OFF							
ADVERTISE SOUND	OFF	ON	ON	ON	ON	ON	ON	ON
NOT USED	OFF							
NOT USED	OFF							
GAME DIFFICULTY *1	NORMAL	EASY	HARD	HARDEST	OFF	OFF	OFF	OFF
NOT USED	OFF							
2 cell MOVE MODE *2	ON	ON	ON	ON	ON	ON	ON	ON
MODE	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF

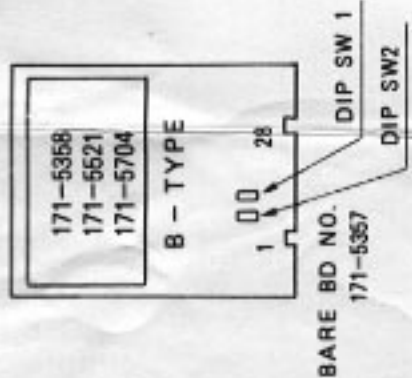

MONITOR  
(ヨコ)  
HORIZONTAL

\*1 (GAME DIFFICULTY) : ブロック落下のスピードアップの速さにより区別しています。  
(Depends on the blocks' falling down speed.)

\*2 (2 cell MOVE MODE) : 1コインで25分以上プレイしている場合、通常の倍(2 cell)のスピードでブロックが落下してくるモード。  
(When a player has been playing for more than 25 minutes with one coin, blocks will fall down two times faster (2 cell speed) than the ordinary speed.)

## PIN ASSIGNMENT

COMPONENT SIDE	SOLDER SIDE
GND	GND
GND	GND
+5V	+5V
+5V	+5V
+12V	+12V
COIN METER 1 (NOT USED)	COIN METER 2 (NOT USED)
(NOT USED)	(NOT USED)
1P BUTTON (NOT USED)	2P BUTTON (NOT USED)
(NOT USED)	(NOT USED)
(NOT USED)	(NOT USED)
1P DOWN	2P DOWN
(NOT USED, 1P UP)	(2P UP, NOT USED)
1P RIGHT	2P RIGHT
1P LEFT	2P LEFT
(NOT USED)	(NOT USED)
(NOT USED)	(NOT USED)
(NOT USED)	(NOT USED)
(NOT USED)	(NOT USED)
COIN 1	1P START
COIN 2	2P START
TEST	(NOT USED)
SERVICE	(NOT USED)
SPEAKER (+)	SPEAKER (-)
RED	GREEN
BLUE	CMP. SYNC
GND	GND
GND	GND

56P P:3.96mm

