

DIP SW1	1	2	3	4	5	6	7	8
1 COIN	1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1	2	ON			ON			
1	3		ON			ON		
1	4	ON	ON			ON	ON	
1	5			ON			ON	
1	6	ON		ON		ON	ON	
2	1		ON	ON			ON	ON
3	1	ON	ON	ON		ON	ON	ON
4	1				ON			ON
5	1	ON			ON	ON		ON
2	3		ON		ON		ON	ON
FREE PLAY		ON	ON	ON	ON	ON	ON	ON

COIN 1

COIN 2

DIP SW2	1	2	3	4	5	6	7	8
GAME								
DIFFICULT:								
* easy	OFF	OFF						
normal	ON	OFF						
hard	OFF	ON						
hardest	ON	ON						
PUCK:								
* 3			OFF	OFF				
2			ON	OFF				
1			OFF	ON				
5			ON	ON				
BONUS:								
* bonus chance (HI/LO cards)				OFF	OFF			
no bonus				ON	OFF			
1 extra puck at 10 stage				OFF	ON			
2 extra puck at 20 stage				ON	ON			

ATTRACTION SOUND:

\* no OFF  
yes ON

STRIP:

soft (castigato) OFF  
hard (integrale + animazione) ON

JAMMA

JAMMA CONNECTOR

28 1  
volume  
Push RESET SWITCH  
at Power ON  
(or GROUND AT JAMMA  
pin 26 solder side)  
to cancel old records.

RESET SW.

Per cancellare vecchi  
records tenere pigiato  
il tasto di RESET o  
mettere a massa pin 26  
lato saldature del  
JAMMA durante l'accensio-  
ne della scheda.

§ HORIZONTAL SCREEN

§ 1 OR 2 PLAYERS  
contemporaneously

§ CONTINUE PLAY

§ 1 STICK FOR PLAYER

(\*) suggested

PARTS SIDE

SOLDER SIDE

GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
	5	
+12V	6	+12V
	7	
COUNT 1	8	COUNT 2
	9	
SPEAKER (+)	10	SPEAKER (-)
	11	
RED	12	GREEN
BLUE	13	SYNC
GND	14	
	15	
COIN 1	16	COIN 2
1P START	17	2P START
1P UP	18	2P UP
1P DOWN	19	2P DOWN
1P LEFT	20	2P LEFT
1P RIGHT	21	2P RIGHT
1P ANIMATION	22	2P ANIMATION
1P ANIMATION	23	2P ANIMATION
	24	
	25	
	26	RESET RECORD
GND	27	GND
GND	28	GND

"FUNNY STRIP"

SH.  
OF.

DATE

REV.

DES.