
GEIGER UMBAU 28.12 82

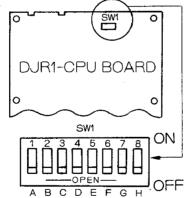


## OPERATION of DIP SWITCH
 
## WIRING AND CONNECTION

内	容	А	В	С	D	E	F	G	Н
The number of Junior									
	3	OFF	OFF				-		
	4	ON	OFF			į Į			
	5	OFF	ON						
6		ON	ON						
Extra Score									
1	10,000 P			OFF	OFF				
1	15,000 P			ON	OFF				
2	20,000 P			OFF	ON			ļ	
	25,000 P			ON	ON			<u> </u>	
Charge									
1coln	1 credit					OFF	OFF	OFF	
1 coin	2credits					OFF	ON	OFF	
1 coin	3credits					OFF	OFF	ON	
1 coin	4credits				ĺ	OFF	ON	ON	
2coins	1 credit					ON	OFF	OFF	
3coins	1credit					ON	ON	OFF	
4coins	1credit					ON	OFF	ON	
5coins	1credit					ON	ON	ON	
Type									
Cocktall									OFF
Up-Right								<u> </u>	ON



## Adjustment of Half-fixed resistance



	Specification		Containts of adjustment				
VR1	50KΩ Up-right type	0.3W White knob	Adjustment of H-screen's location	O Downward			
VR2	50KΩ Up-right type	0.3W White knob	Adjustment of V-screen's location	( Leftward			

44P Edge-connector Harness

1	GND
À	GND
2	GND
В	GND
3	+5V
C	+5V
4	+5V
D D	
5	+5V +12V
E	+12V
6	—5V
	—5V
. F	-50
	COIN
H	COIN
8	2PLAYER
J	1PLAYER
9	SUB RIGHT
K	MAIN RIGHT
10	SUB LEFT
L	MAIN LEFT
11	SUB UP
M	MAIN UP
12	SUB DOWN
N	MAIN DOWN
13	SUB JUMP
Р	MAIN JUMP
14	
R	
15	
S	SERVICE
16	GND
Τ	GND
17	TVG
U	TVR
18	SYNC
V	TVB
19	AUDIO
W	
20	
X	
21	GND
Υ	GND
- 22	GND