

Cue Brick

ディップスイッチ No.1 セット

1. コインスイッチ No.1 セット

SW	1	2	3	4	コイン	プレイ
○	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				フリープレイ	

フリープレイとはコインを入らなくてもプレイ出来る状態を言う

2. コインスイッチ No.2 セット

SW	5	6	7	8	コイン	プレイ
○	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				無効	

DIP SWITCH No.1 SETTINGS

1. COIN SWITCH NO.1 SETTINGS

SW	1	2	3	4	COIN	PLAY
○	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				フリープレイ	

FREEPLAY: You can play game without coins.

2. COIN SWITCH NO.2 SETTINGS

SW	5	6	7	8	COIN	PLAY
○	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				VOND	

ディップスイッチ No.2 セット

1. プレイヤー数

SW	1	2	プレイヤー数
○	OFF	OFF	1
	ON		2
	OFF	ON	3
	ON		4

2. テーブル/アップライト切り換え

SW	3	タイプ
○	OFF	テーブル型
	ON	アップライト型

3. マシンネーム切り換え

SW	4	5	マシンネーム
○	OFF	OFF	ネームなし
	ON		Lewis
	OFF	ON	Johnson
	ON		George

4. ゲームの難度

SW	6	7	難度
○	OFF	OFF	易しい
	ON		普通
	OFF	ON	難しい
	ON		大変難しい

5. タモ中の音

SW	8	音
○	OFF	無
	ON	有

DIP SWITCH No.2 SETTINGS

1. THE NUMBER OF BALLS

SW	1	2	NUMBER
○	OFF	OFF	1
	ON		2
	OFF	ON	3
	ON		4

2. CHANGE OF TABLE/UPRIGHT

SW	3	TYPE
○	OFF	TABLE
	ON	UPRIGHT

3. CHANGE OF MACHINE NAME

SW	4	5	NAME
○	OFF	OFF	NO NAME
	ON		Lewis
	OFF	ON	Johnson
	ON		George

4. DIFFICULTY OF THE GAME

SW	6	7	DIFFICULTY
○	OFF	OFF	EASY
	ON		NORMAL
	OFF	ON	DIFFICULT
	ON		VERY DIFFICULT

5. SOUND IN ATTRACTIVE MODE

SW	8	SOUND
○	OFF	OFF
	ON	ON