

**Big Event  
Golf™**

**TAITO  
AMERICA  
CORPORATION**

**660 S. Wheeling Rd.  
Wheeling, IL 60090  
312-520-9280**



©1986

POWER SUPPLY

WARNING WARNING WARNING WARNING WARNING WARNING WARNING

THE POWER SUPPLY REQUIREMENTS FOR THIS CONVERSION FROM YOUR OLD GAME MUST BE CAPABLE OF +5 VDC REGULATED AT 6A; +12 VDC REGULATED AT 1A AND -5 VDC AT 1/2A. THESE OPERATING VOLTAGES ARE NECESSARY FOR YOUR KIT.

GAMES SUCH AS "PACMAN" AND "GALAGA" USE A POWER SUPPLY DIRECTLY ON THEIR PC BOARD ASSEMBLY:

THEREFORE THE VOLTAGE GOING DIRECTLY INTO THE PC BOARD ASSEMBLY IS 110 VOLTS!

!!!!!!UNDER NO CIRCUMSTANCES DIRECTLY CONNECT ANY HARNESS OF THIS TYPE INTO THE NEW BOARD SET WITHOUT MAKING NECESSARY CHANGES TO OVERCOME ANY BOARD FAILURES!!!!!!

**IMPORTANT F.C.C. WARNING**

**WARNING**

THIS EQUIPMENT GENERATES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE INTERFERENCE TO RADIO COMMUNICATIONS. AS TEMPORARILY PERMITTED BY REGULATION IT HAS NOT BEEN TESTED FOR COMPLIANCE PURSUANT TO SUBPART J OF PART 15 OF FCC RULES, WHICH ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST SUCH INTERFERENCE. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE INTERFERENCE IN WHICH CASE THE USER, AT HIS OWN EXPENSE, WILL BE REQUIRED TO TAKE WHATEVER MEASURES MAY BE NECESSARY TO CORRECT THE INTERFERENCE.

## GAME INSTRUCTIONS

Welcome to Taito America Corporation's "Big Event Golf"™. This challenging 18 hole golf course has excellent graphics and provides the realism of an actual golf course.

Simply trying to get the ball in the cup is not the only obstacle you'll encounter. The course has sand traps, water traps and wind that will make your day at the course a real challenge.

Clubs for each shot are selected automatically by the game for the beginner. For the expert the "Club Select" button will allow you to improve on your shot.

One coin placed in the game will allow you to play three holes. Bonus holes are awarded for getting "par" or better. The player can only play the front 9 holes (no matter how many bonus holes are won) and will be asked to "continue" to play the back 9.

Or the player can insert 5 coins to guarantee a complete 9 hole round thus making the game actually two games in one. The game always ends after the 18th hole (no matter how many bonus holes are won).

A timer insures that the player will tee-off promptly. If the player goes twice par, he must give up the hole.

An inset map on the video screen always tracks the path of the ball and player's location on each hole.

Grain of the putting green, wind direction and speed are also illustrated on the monitor.

**"Big Event Golf"™** is the best, most challenging golf course that provides realism not seen on any other golf game.

This manual will guide you in the conversion of your color monitor upright video game into a "Big Event Golf"™ game. We urge you to read through the instructions before beginning the conversion.

## WARNINGS AND NOTICES

For safety and reliability, Taito America Corporation does not recommend or authorize any substitute parts or modifications of Taito America Corporation equipment.

Use of non-Taito America parts and modifications of game circuitry may adversely affect game performance and safety.

Substitute parts or equipment modifications may void FCC acceptance.

Since "Big Event Golf"<sup>TM</sup> is protected by Federal copyright, trademark and patent laws, unauthorized versions of this game are illegal under Federal Law. This also applies to unauthorized facsimiles of Taito America equipment, logos, designs, publications, assemblies and games (or features not deemed to be in the public domain) whether manufactured with Taito America components or not.

### NOTICE

Parts salvaged from your old game are required to complete your kit. These salvaged parts **MUST** operate perfectly, or the converted game can not perform properly or safely. Always repair circuit board malfunctions and cabinet damage before conversion is attempted.

Check the parts supplied in this kit against the parts list included in this manual.

### CAUTION

For safe operation it is recommended the game be grounded. This game should be equipped with a three conductor power cable. The third conductor is the ground conductor and when the cable is plugged into an appropriate receptacle, the game is grounded. The offset pin on the power cable's three-prong connector is the ground connection. Do not use an adapter plug to defeat the ground pin on the power cord.

### NOTICE

This kit is not intended for use with X-Y monitors. Suitable monitors are the horizontal or vertical raster-scan with inputs for red, green and blue video as well as negative sync. (These should be compatible with TTL logic levels.)

Note: "Big Event Golf"<sup>TM</sup> uses a vertical monitor.

## NOTICE

Be sure the power supply from your old game is capable of +5 vdc regulated at 6A; +12 vdc regulated at 1A and -5 vdc at 1/2A. These operating voltages are necessary for your kit. Please note the enclosed warning with the PC Board Assembly.

### TAITO AMERICA CORPORATION KIT PARTS PROVIDED

- 1-"Big Event Golf"<sup>TM</sup> PC BOARD ASSEMBLY
- 1-TRACKBALL ASSEMBLY
- 1-"Big Event Golf"<sup>TM</sup> CONTROL PANEL OVERLAY
- 1-"Big Event Golf"<sup>TM</sup> MONITOR COVER PLEXIGLASS
- 1-"Big Event Golf"<sup>TM</sup> MARQUEE
- 1-WIRING HARNESS
- 1-INSTRUCTION CARD WITH REMOVABLE CONTROL STICKERS
- 1-"CLUB SELECT" BUTTON
- 1-FCC CAGE
- 2-PCB MOUNTING BLOCKS

### TOOLS AND SUPPLIES REQUIRED

SCREWDRIVER  
WIRE CUTTERS  
ELECTRIC DRILL WITH BITS  
DRILL PRESS RECOMMENDED  
SOLDERING IRON AND SOLDER  
PLIERS  
PHILLIPS SCREWDRIVER  
HEX DRIVER  
180-GRIT SANDPAPER  
GREASE PENCIL OR MARKER  
X-ACTO KNIFE  
HACKSAW, JIGSAW OR TABLESAW W/CARBIDE-TIPPED BLADE  
ELECTRICAL TAPE OR HEAT-SHRINK TUBING

All games require a certain amount of maintenance to keep in good condition. A periodic check of mechanical controls would be beneficial to guarantee your game will be profitable.

## GAME PREPARATION

### **CLEANING**

The exterior of the game, all metal parts and all plastic parts can be cleaned with non-abrasive cleaner. Caution should be used when cleaning the plastic. A dry cloth can cause scratches and result in a foggy worn appearance. Plexiglass cleaner on a soft cloth is suggested to maintain and keep your monitor crt cover looking new.

### **CABINET**

Inspect your cabinet for any gouges or items stuck on the cabinet like chewing gum. Remove all foreign objects and fill in the gouges with any type of quick hardening wood putty. Sand to ensure the surface is smooth. Wipe the outside of the old cabinet clean. Remember the reason you are converting your old game is to have the earnings of a new game. Making your game look like a new game will increase your earnings and spark player-interest.

### **NOTICE**

Please make sure you clean and lubricate the coin mechanisms. It is important that you service them in order for this game to achieve the maximum possible earnings.

## CONVERSION INSTRUCTIONS

Remove the new "Big Event Golf"<sup>TM</sup> marquee from the kit. This new marquee provided with your kit is specifically designed for ease of handling. Place and center the old marquee on top of the new marquee. Place masking tape on the area where you intend to cut the new marquee. Using an x-acto knife score the new marquee and simply break at this score. If your old marquee is made of glass, remove the paint of the old marquee and attach the new marquee behind this glass. If your old marquee is made of plexiglass, it is recommended that new clear plexiglass be used to best provide the brilliance of your new marquee.

Remove the new "Big Event Golf"<sup>TM</sup> monitor plexiglass from the kit. Place the center of the old monitor glass on top of the new monitor plexiglass. Place masking tape on the area where you intend to cut the new plexiglass. With your grease pencil draw a straight line to use as a cutting guide. Using the hacksaw or jigsaw cut the plexiglass down to size.

## CONTROL PANEL

Remove the old control panel buttons or joysticks. Clean and sand smooth any imperfections on the existing lexan material.

Place the template provided in this manual on the control panel to design the best possible positioning for your buttons, trackball assembly and control panel instructions.

Leave your 1 and 2 player start buttons where they are on the old control panel. (Use the enclosed 1 and 2 player stickers if needed.) Drill holes as needed for installation of the trackball assembly and other buttons.

Using the trackball assembly drilling template included in this manual select where to best place the trackball assembly. It is suggested that the assembly be centered on the control panel.

Please note the correct placement of the trackball assembly to insure proper operation of game. As noted on the drilling template it is best to drill a 2 1/4" hole. The trackball assembly should fit into the control panel with the black (1/16") lip flush with the top of the control panel. Clean any burrs from around holes. Any hole that is no longer needed we suggest plugging with wood, putty or epoxy.

Remove any soil and/or grime from the front of the old control panel lexan.

Cut the new "Big Event Golf"<sup>TM</sup> lexan to the appropriate size needed to cover the panel. If possible, leave enough lexan to wrap a small lip around the top and bottom of the panel.

Remove the backing from the "Big Event Golf"<sup>TM</sup> lexan and apply it over the old control panel being careful to avoid air pockets.

After the lexan is securely on, with an x-acto knife or razor blade cut the holes on the control panel. Install the new joystick, buttons and any hardware that might have been removed on the control panel and tighten them down.

Attach the additional sticker marked "Club Select" to the control panel.



## ADDITIONAL GAME PLAY INSTRUCTIONS

Your new monitor plexiglass has instructions on it. If when installing the new monitor plexiglass it becomes necessary to cut through the instructions, place the additional set of instructions on the monitor plexiglass.

### WIRING PROCEDURES

#### INSTALLING INTERBOARD WIRING

This game comes with a color-coded 3 connector cable for easy installation. Refer to the wiring diagram in this manual for quick connections.

Disconnect the old wiring harness from the old CPU board.

Carefully remove old circuitboards and FCC cages from the game.

Using the schematic drawings from your old game, carefully note the function of each wire.

Leaving several inches of wire from the old wiring harness at each connector, cut the wires near the game's coin door, monitor, control panel, power supply and speaker wires. Install the new wiring harness to those points following your wiring diagram. Use electrical tape or heat-shrink tubing to insulate all splices.

Install your FCC cage where the old board set was.

#### \*\*\*\*\*SPECIAL NOTICE\*\*\*\*\*

The "SOUND" board of the PCB assembly is not attached to the "CPU" board. Carefully remove the SOUND board from its package. Align the pins of the CPU board connector located near the "G" connector with the connector of the SOUND board and insert. Carefully align the 4 stand-offs on the CPU board with the corresponding holes on the SOUND board and insert.

Mount the "Big Event Golf"<sup>TM</sup> PCB assembly with the mounting blocks provided in the center of the FCC cage. Plug the wiring harness onto the PCB and close the cage securely.

If your game has seriespass transistors for the power supply on a separate heatsink, remount the metal heatsink beside the power supply board.

Check and clean the input jack on the power supply board. Replace any burned or damaged pins.

### GAME PLAY AND DIP SWITCH SETTINGS

"Big Event Golf"<sup>TM</sup> has been designed with dip switches for operator-adjustable features for maximum earnings in your location. Using the dip switch chart provided in this manual will allow you to customize the game for your location.

If done properly your game should look new. The conversion is complete.

WE APPRECIATE YOUR PURCHASE OF TAITO AMERICA'S "BIG  
EVENT GOLF"<sup>TM</sup> KIT AND SINCERELY HOPE THAT THE GAME PROVIDES  
MANY HOURS OF CONTINUED EARNINGS AND ENJOYMENT FOR YOU  
AND YOUR PLAYERS.

PLEASE LOOK TO TAITO AMERICA CORPORATION TO ALWAYS  
PROVIDE THE VERY BEST IN VIDEO ENTERTAINMENT FOR YOU!

BIG EVENT GOLF™ KIT CONNECTOR DIAGRAM

FUNCTION	COLOR			COLOR	FUNCTION
GROUND	BLK	1	A	BLK	GROUND
VIDEO RED	RED	2	B	BLK	VIDEO GND
VIDEO GREEN	GRN	3	C	BLU	VIDEO BLUE
VIDEO SYNC.	WHT	4	D		
SOUND (+)	ORG	5	E	BLK/WHT	SOUND (-)
KEY	-----	6	F	-----	KEY
		7	H		
COIN SWITCH	BRN	8	J		
COIN METER	GRN	9	K		
		10	L		
SERVICE SW.	YEL	11	M		
SELECT 1P	GRY/WHT	12	N	BLU/WHT	SELECT 2P
BALL UP	ORG/WHT	13	P		
BALL DOWN	RED/WHT	14	R		
BALL RIGHT	YEL/WHT	15	S		
BALL LEFT	BRN/WHT	16	T		
		17	U		
		18	V		
		19	W		
		20	X		
CLUB SELECT	VIO/WHT	21	Y		
		22	Z		
PARTS SIDE		PIN NO.		SOLDER SIDE	

FUNCTION	COLOR			COLOR	FUNCTION
GROUND *	BLK *	1	A	BLK *	GROUND *
		2	B		
		3	C		
		4	D		
		5	E		
		6	F		
-----KEY-----	-----	7	H	-----KEY-----	-----
		8	J		
		9	K		
		10	L		
		11	M		
		12	N		
		13	P		
		14	R		
		15	S		
		16	T		
		17	U		
+5 VOLTS *	RED *	18	V	RED *	+5 VOLTS *

FUNCTION	COLOR		PIN
GROUND *	BLK *	1	
		2	
GROUND *	BLK *	3	
		4	
+5 VOLTS *	RED *	5	
		6	
+5 VOLTS *	RED *	7	
-5 VOLTS *	BRN *	8	
+12 VOLTS *	YEL *	9	
-----KEY-----	-----	10	
+12 VOLTS *	YEL *	11	
+12 VOLTS *	YEL *	12	

BLK-BLACK      WHT-WHITE  
 BLU-BLUE        BRN-BROWN  
 ORG-ORANGE    YEL-YELLOW  
 GRN-GREEN     VIO-VIOLET  
 GRY-GRAY       RED-RED

\*\*\* DENOTES 18 GAUGE WIRE. ALL OTHERS WILL BE 22 GAUGE WIRE.

TRACK BALL ASSEMBLY


ISSUE A

WIRING FROM TRACK BALL AS FOLLOWS:

- 2 RED WIRES TO +5V
- 2 BLK WIRES TO GROUND
- 1 YEL WIRE TO POSITION 16 (BRN/WHT) ON "G" CONNECTOR
- 1 GRN WIRE TO POSITION 15 (YEL/WHT) ON "G" CONNECTOR
- 1 BLU WIRE TO POSITION 13 (ORG/WHT) ON "G" CONNECTOR
- 1 VIO WIRE TO POSITION 14 (RED/WHT) ON "G" CONNECTOR

For proper orientation — unit to be mounted as shown.

TOP CENTER

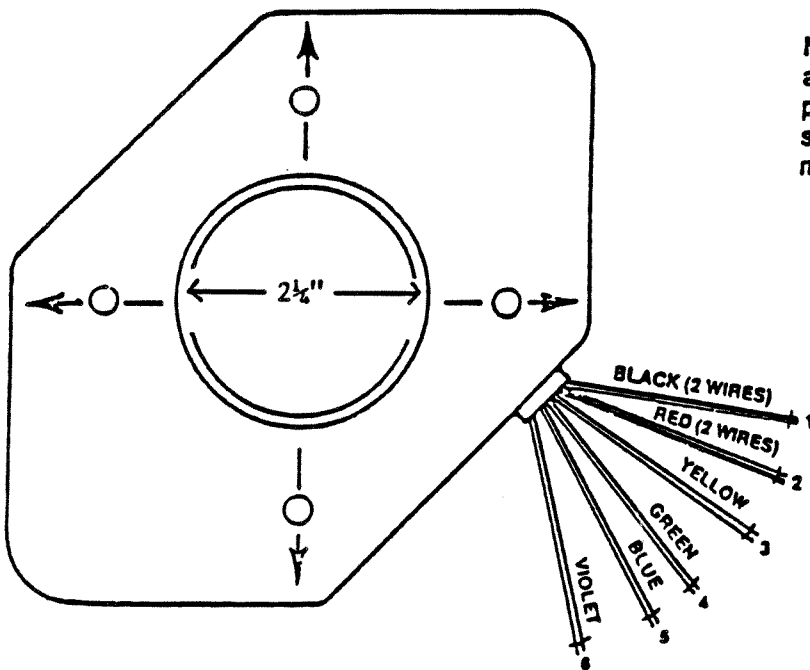

**NOTE:** Due to various manufacturers' electronic characteristics, you may find that your Trackball Unit, though properly orientated, is visually reversed on the video screen. To correct this problem, the following change(s) must be made to harness wires:

- 1 — To switch VERTICAL direction (↑), exchange the BLUE & VIOLET wires.
- 2 — To switch HORIZONTAL direction (→), exchange the YELLOW & GREEN wires.

## BIG EVENT GOLF™ KIT DIP SWITCH SETTINGS

SWITCH BANK "A"	1	2	3	4	5	6	7	8
UPRIGHT MODE	ON							
COCKTAIL MODE	OFF							
MONITOR REVERSE		OFF ON						
NORMAL GAME			OFF					
TEST MODE			ON					
ATTRACT SOUND ON				OFF				
ATTRACT SOUND OFF				ON				
1 COIN 1 CREDIT					OFF	OFF	OFF	OFF
1 COIN 2 CREDIT					ON	OFF	ON	OFF
2 COIN 1 CREDIT					OFF	ON	OFF	ON
2 COIN 3 CREDIT					ON	ON	ON	ON
SWITCH BANK "B"	1	2	3	4	5	6	7	8
EASIEST	ON	OFF						
EASY	OFF	OFF						
DIFFICULT	OFF	ON						
HARDEST	ON	ON						
3 HOLES/COIN			OFF	OFF				
2 HOLES/COIN			ON	OFF				
1 HOLE/COIN			OFF	ON				
4 HOLES/COIN			ON	ON				
ENGLISH TITLE					ON			
JAPANESE TITLE					OFF			
3 CREDITS/9 HOLES						OFF	OFF	OFF
4 CREDITS/9 HOLES						ON	OFF	OFF
5 CREDITS/9 HOLES						OFF	ON	OFF
6 CREDITS/9 HOLES						ON	ON	OFF
7 CREDITS/9 HOLES						OFF	OFF	ON
8 CREDITS/9 HOLES						ON	OFF	ON
9 CREDITS/9 HOLES						OFF	ON	ON
10 CREDITS/9 HOLES						ON	ON	ON
<b>FACTORY SETTINGS:</b>								
SWITCH BANK "A"	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SWITCH BANK "B"	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
SWITCH BANK "C"	[NOT USED - ALL OFF]							