

Jan 24, 2000



# SERVICE BULLETIN

SEGA Service Department  
45133 Industrial Drive  
Fremont, Ca. 94538

<http://www.seuservice.com>  
Phone: 415.701.6580  
Fax: 415.701.6594

## SEGA Bass Fishing™ ALL CABINET STYLES

**PROBLEM:** Torq and wear applied to Bass Fishing handle causes an M3x8 screw (located near the 'butt' end of handle) to work it's way loose.

**SOLUTION:** Apply a small amount of blue loctite to screw before reinserting it.

*NOTE: Do not replace with longer screw, as this can pierce the wire harness located within the handle assy, causing a short circuit and/or failure.*

USE BLUE LOCTITE  
PART NO. 242

