

SEGA

SERVICE BULLETIN

SEGA Service Department
45133 Industrial Drive
Fremont, Ca. 94538

<http://www.seuservice.com>
Phone: 415.701.6580
Fax: 415.701.6594




This bulletin effects ALL games with card reader units.

PROBLEM: Card reader is getting excessively dirty causing premature failure.

SOULUTION: Regularly cleaning the card reader by following the procedure described below along with the standard card cleaning method.


Optimum card reader operation depends on keeping the reader clean. Sega recommends, on top of the regular card cleaning method, a thorough cleaning of the reader transport area. Observe the following procedure to assure your reader stays as clean as possible:

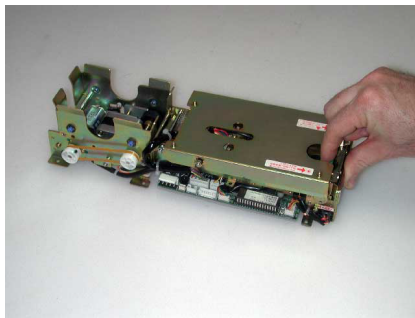

- 1- Access the transport area by releasing the top door stay mechanism. (Green Bar)



- 3- Continue by thoroughly wiping down the upper transport area.

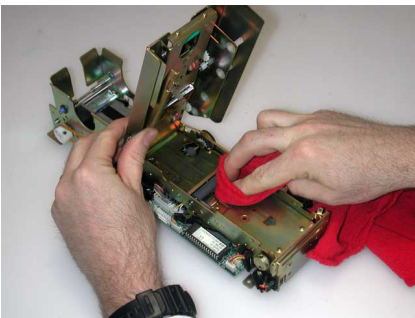

- 2- Using a red shop rag and denatured alcohol, thoroughly wipe down lower transport area.

*By adhering to this additional cleaning method, your card reader will last longer and have less problems. We recommend cleaning with this method every two weeks.

If you have any questions please contact the SEGA Service Department at the numbers given above.