

Figure 3-7 Foot-Pedal Control Assembly



WARNING -



Before you remove or repair any player control, turn the game off.

Removing the Foot-Pedal Control Assembly:

- 1. Unlock and open the rear access panel. Reach through the opening to the top of the foot-pedal control.
- Remove the two locknuts located on the top two footpedal mounting screws.
- From the front of the *Upright* cabinet or in the player area of the *Sit-Down* cabinet, remove the foot-pedal mounting screws and lift out the foot-pedal control assembly.
- 4. The only maintenance required on this newly designed foot-pedal control is lubrication every four months (see *Figure 3-7*). **Lubricate** the pivot pin and surrounding area, the springs, cable, and pulley with dry teflon spray. If needed, apply a light-duty lubricant like WD-40 to the potentiometer shaft **only**.
- 5. Reassemble in reverse order.

Foot-Pedal Control Assembly Upright A039413-01 D Sit-Down A039109-01 C Parts List

Assemblies and components in the following parts list are shown in Figure 3-7.

Part No.	Description	
	Sit Down Cabinet	
A039247-01 72-HB3410S 75-010S 160023-001	Dual Foot-Pedal Control Harness Assembly #4-40 x .62-Inch Thread-Forming Hex Washer-Head Screw #10 Tooth Internal Lock Washer SPDT Snap Switch with Actuator	
	Upright Cabinet	
A039463-01 75-035S 75-040S 75-5520B 75-915S 039379-01	Single Foot-Pedal Control Pedal Harness Assembly 1/4-Inch Flat Washer #10 Tooth Internal Lock Washer #1/4-20 x 1.25-Inch Black Carriage Bolt (not shown) #1/4-20 Hex Nut Single Foot-Pedal Control Mounting Plate	
	Upright and Sit-Down Cabinets	
19-9026 72-8606 75-941S 000592-01	5 kΩ Potentiometer #6-32 x .38-Inch Hex Socket-Head Cap Screw #10-24 Hex Locknut Compression Spring <i>(for pedal)</i>	
039236-01 039238-01 039239-01 039240-01	Pivot Pin Pulley Foot-Pedal Control Base Plate Foot Pedal	
039241-01 039242-01 107012-001 178012-004	Safety Tread Cable Dry Teflon Spray Lubricant <i>(not shown)</i> External Retaining Ring for %-Inch Diameter Shaft	
039703-01 039704-01	Extension Spring (for cable) Extension Spring (for pedal)	