www.sauservice.com




Nose Replacement and Parts Addendum



SEGA AMUSEMENTS USA, INC. MANUAL NO. 999-2101 GAME CODE: JT

VISIT OUR WEBSITE!

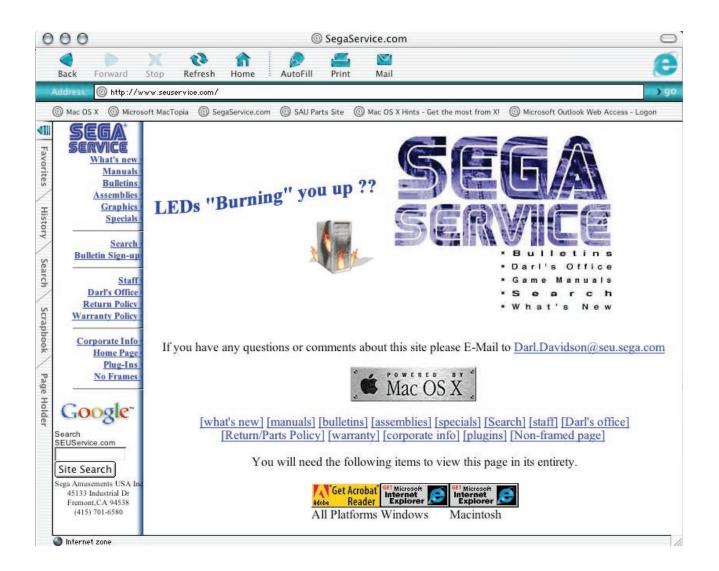

BEFORE USING THE PRODUCT, BE SURE TO READ THE FOLLOWING:

To maintain the safety:

To ensure the safe usage of the product, be sure to read the following before using the product. The following instructions are intended for the users, operators and the personnel in charge of the operation of the product. After carefully reading and sufficiently understanding the warning displays and cautions, handle the product appropriately. Be sure to keep this manual nearby the product or elsewhere convenient for referring to it when necessary.

Herein, explanations which require special attention are enclosed with dual lines. Depending on the potentially hazardous degrees, the terms of WARNING, CAUTION, etc. are used. Be sure to understand the contents of the displays before reading the text.



Indicates that mishandling the product by disregarding this warning will cause a potentially hazardous situation which can result in death or serious injury.



Indicates that mishandling the product by disregarding this caution will cause a slight hazardous situation which can result in personal injury and or material damage.

For the safe usage of the product, the following pictographs are used:



Indicates "HANDLE WITH CARE." In order to protect the human body an equipment, this display is attached to places where the Owner's Manual and or Service Manual should be referred to.

O Perform work in accordance with the instructions herein stated.

Instructions for work are explained by paying attention to the aspect of accident prevention. Failing to perform work as per the instructions can cause accidents. In the case where only those who have technical expertise should perform the work to avoid hazardous situation, the instructions herein state that the serviceman should perform such work.

O Be sure to turn off power before working on the machine.

To prevent electric shock, be sure to turn off power before starting the work in which the worker touches the interior of the product. If the work is to be performed in the power-on status, the Instruction Manual herein always states to that effect.

O Be sure to ground the Earth Terminal (this, however, is not required in the case where a power cord with earth is used).

This product is equipped with the Earth Terminal. When installing the product, Connect the Earth Terminal to the "accurately grounded indoor earth terminal" by using an earth wire. Unless the product is grounded appropriately, the user can be subject to electric shock. After performing repair, etc. for the Control equipment, ensure that the Earth Wire is firmly connected to the Control equipment.

O Ensure that the Power Supply used is equipped with an Earth Leakage Breaker. This product does not incorporate the Earth Leakage Breaker. Using a power supply which is not equipped with the Earth Leakage Breaker can cause a fire when earth leakage occurs.

O Be sure to use fuses which meet the specified rating. (only for the machines which use fuses). Using fuses exceeding the specified rating can cause a fire and electric shock.

O Specification changes (removal of equipment, conversion and addition) not designated by SEGA are not allowed.

The parts of the product include warning labels for safety, covers for personal protection, etc. It is very hazardous to operate the product by removing parts and or modifying the circuits. Should doors, lids and protective parts be damaged or lost, refrain from operating the product, and contact where the product was purchased from or the office herein stated. SEGA shall not be held responsible for any accidents, compensation for damage to a third party, resulting from the specifications not designated by SEGA.

- Ensure that the product meets the requirements of appropriate Electrical Specifications. Before installing the product, check for Electrical Specifications. SEGA products have a nameplate on which Electrical Specifications are described. Ensure that the product is compatible with the power supply voltage and frequency requirements of the location. Using any Electrical Specifications different from the designated Specifications can cause a fire and electric shock.
- O Install and operate the product in places where appropriate lighting is available, allowing warning labels to be clearly read.

To ensure safety for the customers, labels and printed instructions describing potentially hazardous situation are applied to places where accidents can be caused. Ensure that where the product is operated has sufficient lighting allowing the warnings to be read. If any label is peeled off, apply it again immediately. Please place an order with where the product was purchased from or the office herein stated.

- When handling the Monitor, be very careful. (Applies only to the product w/monitor.) Some of the monitor (TV) parts are subject to high tension voltage. Even after running off power, some portions are still subject to high tension voltage sometimes. Monitor repair and replacement should be performed only be those technical personnel who have knowledge of electricity and technical expertise.
- O Be sure to adjust the monitor (projector) properly. (Applies only to the product w/monitor.) Do not operate the product leaving on-screen flickering or blurring as it is. Using the product with the monitor not properly adjusted may cause dizziness or a headache to an operator, a player, or the customers.
- O When transporting or reselling this product, be sure to attach this manual to the product. In the case where commercially available monitors and printers are used in this product, only the contents relating to this product are explained herein. Some commercially available equipment has functions and reactions not stated in this manual. Read this manual together with the specific Instruction Manual of such equipment.
 - Descriptions herein contained may be subject to improvement changes without notice.
 - The contents described herein are fully prepared with due care. However, should any question arise or errors be found, please contact SEGA.

INSPECTIONS IMMEDIATELY AFTER TRANSPORTING THE PRODUCT TO THE LOCATION.

Normally, at the time of shipment, SEGA products are in a status allowing for usage immediately after transporting to the location. Nevertheless, an irregular situation may occur during transportation. Before turning on power, check the following points to ensure that the product has been transported in a satisfactory status.

- Are there any dented portions or defects (cuts, etc.) on the external surfaces of the cabinet?
- Are Casters and Adjusters, damaged?
- Do the power supply voltage and frequency requirements meet with those of the location?
- Are all wiring connectors correctly and securely connected? Unless connected in the correct direction, connector connections can not be made accurately. Do not insert connectors forcibly.
- \Box Do power cords have cuts and dents?
- \Box Do the fuses used meet specified rating? Is the Circuit Protector in an energized status?
- Are all accessories available?
- □ Can all Doors and Lids be opened with the Accessory keys? Can Doors and Lids be firmly closed?

BEFORE USING THE PRODUCT, BE SURE TO READ THE FOLLOWING:	
TABLE OF CONTENTS	
INTRODUCTION OF THE OWNER'S MANUAL	
1. HANDLING PRECAUTIONS	1
2. PRECAUTIONS CONCERNING INSTALLATION LOCATION	2 - 3
	4 - 7
4. ACCESSORIES	8 - 10
5. ASSEMBLING AND INSTALLATION	11 - 18
	19
7. CONTENTS OF GAME	20 - 24
8. EXPLANATION OF TEST AND DATA DISPLAY	25 - 52
8 - 1 SWITCH UNIT AND COIN METER	27 - 28
8 - 2 SYSTEM TEST MODE	29 - 41
8 - 3 GAME TEST MODE	42 - 52
9. CONTROL PANEL (ASSY HANDLE MECHA)	53 - 57
9 - 1 ADJUSTING/REPLACING THE V.R.	53 - 55
9-2 GREASING	56
10. SPEED SHIFTER (SHIFT LEVER)	57 - 59
10 - 1 REMOVING THE 4-SPEED SHIFTER	57 - 58
10 - 2 REPLACING THE SWITCH	59
11. PEDAL DUAL	60 - 61
	60 - 61
11 -2 GREASING	61
12. COIN SELECTOR	62 - 65
13. REPLACING THE FLOURESCENT LAMP, AND LAMPS	66 - 67
14. PERIODIC INSPECTION TABLE	68
15. TROUBLESHOOTING	69 - 70
	71 - 74
16 - 1 REMOVING THE GAME BOARD	72 - 73
16 - 2 COMPOSITION OF GAME BOARD	74
17. COMMUNICATION PLAY	75 - 80
	75 - 76
	76 - 78
	79 - 80
	81 - 82
	83 - 97
	98
21. WIRING DIAGRAM	XXX

INTRODUCTION OF THE OWNERS MANUAL

This Owner's Manual is intended to provide detailed descriptions together with all the necessary information covering the general operation of electronic assemblies, electromechanicals, servicing control, spare parts, etc. as regards the product,

Nose Replacement and Parts Addendum.

This manual is intended for the owners, personnel and managers in charge of operation of the product. Operate the product after carefully reading and sufficiently understanding the instructions. If the product fails to function satisfactorily, non-technical personnel should under no circumstances touch the internal system. Please contact where the product was purchased from.

Use of this product is unlikely to cause physical injuries or damages to property. However, where special attention is required this is indicated by a thick line, the word "IMPORTANT" and its sign in this manual.



Indicates that mishandling the product by disregarding this display can cause the product's intrinsic performance not to be obtained, resulting in malfunctioning.

SEGA AMUSEMENTS USA, INC. / CUSTOMER SERVICE 45133 Industrial Drive, Fremont, California 94538, U.S.A. Phone : (415) 701-6580 Fax : (415) 701-6594



Non-technical personnel who do not have technical knowledge and expertise should refrain from performing such work that this manual requires the location's maintenance man or a serviceman to carry out, or work which is not explained in this manual. Failing to comply with this instruction can cause a severe accident such as electric shock.

Ensure that parts replacement, servicing & inspections, and troubleshooting are performed by the location's maintenance man or the serviceman. It is instructed herein that particularly hazardous work should be performed by the serviceman who has technical expertise and knowledge.

The location's maintenance man and serviceman are herein defined as follows:

"Location's Maintenance Man" :

Those who have experience in the maintenance of amusement equipment and vending machines, etc., and also participate in the servicing and control of the equipment through such routine work as equipment assembly and installation, servicing and inspections, replacement of units and consumables, etc. within the Amusement Facilities and or locations under the management of the Owner and Owner's Operators of the product.

Activities of Location's Maintenance Man :

Assembly & installation, servicing & inspections, and replacement of units & consumables as regards amusement equipment, vending machines, etc.

Serviceman :

Those who participate in the designing, manufacturing, inspections and maintenance service of the equipment at an amusement equipment manufacturer.

Those who have technical expertise equivalent to that of technical high school graduates as regards electricity, electronics and or mechanical engineering, and daily take part in the servicing & control and repair of amusement equipment.

Serviceman's Activities :

Assembly & installation and repair & adjustments of electrical, electronic and mechanical parts of amusement equipment and vending machines.



Notes:

1. Changing or Repairing the Nose

It has been brought to our attention here at Sega Amusements USA, Inc. that the Jungle Treasures Game breaks in the nose section. This addendum is to facilitate you the operator in changeing or repairing that nose unit.

1- Remove this screw to detach the prize scoop. The scoop will just pull off after the screw is completely removed.

2- Slide the ribbed nose cover off the mechanical nose assembly untill it appears as the 3rd picture on this page. Have a care not to lose any e-rings which might have come unattached in the process.

3- Remove the screw from the rear of the head section. This head covering is removed by lifting up and sliding it down the mechanical nose assembly.





4- Your unit should now apprear as in the picture to the right.

5- Now remove the 4 screws indicated within the circled area.

6- then loosen the two screws indicated to slide the cover plate back. Underneath you will find a phillips headed screw connected to a locking nut underneath. Remove this then take the mechanical nose assembly to another area to work on.

7- Remove the two screws from the front of the mechanical nose assembly from the underbelly of the assembly.









8- Slide the slide mechanism out of the groves in the mechanical nose assembly. Now remove these two screws in the slide mechanisim detaching the banding from within the mechanical nose assembly.

9- To reassembly, follow these steps in reverse.






2. Nose Parts

Item Num- ber	Part Number	Description	Picture
1	999-2001	Ribbed Mechanical Nose Tendon	
2	999-1817	Slide Mechanical Nose Tendon	
3	999-1816	Metal Mechanical Nose Tendon	
4	999-1820	Nose Slide Screw Plate	
5	999-2027	Nose Tip Spacer Plate (2 per game)	
6	999-2028	Nose Tip Tendon Screw Plate	
7	999-1821	Mechanical Nose Slide	
8	999-1814	Mechanical Nose Tip	
9	999-2126	Metal Mechanical Nose Chain	TITTTIN
10	999-2003	Slide Bushing	

3.	Other	Changes	from	First	Production	Run
----	-------	---------	------	-------	------------	-----

Item Num- ber	Part Number	Description	Picture
1	999-1843	Prize Stir Fin	
2	999-2033	Elephant Position Sen- sor Cover Box	
3	999-1993	Motor Belt Pully	See Picture below
4	999-1996	Motor Belt	See Picture below

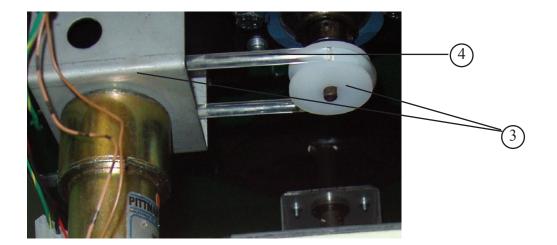

This is a filler page to even out the numbers.

Warranty

Your new Sega Product is covered for a period of 90 days from the date of shipment. This certifies that the Printed Circuit Boards, Power Supplies and Monitor are to be free of defects in workmanship or materials under normal operating conditions. This also certifies that all Interactive Control Assemblies are to be free from defects in workmanship and materials under normal operating conditions. No other product in this machine is hereby covered.

Sellers sole liability in the event a warranted part described above fails shall be, at its option, to replace or repair the defective part during the warranty period. For Warranty claims, contact your Sega Distributor.

Should the Seller determine, by inspection that the product was caused by Accident, Misuse, Neglect, Alteration, Improper Repair, Installation or Testing, the warranty offered will be null and void.

Under no circumstances is the Seller responsible for any loss of profits, loss of use, or other damages.

This shall be the exclusive written Warranty of the original purchaser expressed in lieu of all other warranties expressed or implied. Under no circumstance shall it extend beyond the period of time listed above.



SEGA AMUSEMENTS USA, INC.

45133 Industrial Drive Fremont, CA 94538 (415) 701-6580 phone (415) 701-6594 fax