PLOTTING

ADJUSTMENT ON GAME PC BOARD (PLOTTING G25 00522A)

CONNECTOR

B DIP SW	SOUND VR ①) INCREASE
----------	------------------------

☆ THE CONTROL OF THIS GAME USES
ONE 2-WAY JOYSTICK AND I BUTTON.
(PAIR CONTROL PANEL)

COIN LOCKOUT (B) K 9		OHNE	CIUN	
GND	SOLDER SIDE			COMPONENTS SIDE
+5V	GND	A	1	
+5V	GND		2	GND
-5V E 5 -5V +12V F 6 +12V (+13V) POST F 6 +12V (+13V) POST COIN COUNTER (B) J 8 COIN COUNTER (A COIN LOCKOUT (B) K 9 COIN LOCKOUT (A SPEAKER (-) L 10 SPEAKER (+) M 11 VIDEO G N 12 VIDEO R VIDEO SYNC P 13 VIDEO B SERVICE SW R 14 VIDEO GND TILT SW S 15 (COIN 2) T 16 COIN 1 2P SELECT U 17 1P SELECT 2P UP V 18 1P UP 2P DOWN X 20 Y 21 2P ACTION BUTTO Z 22 1P ACTION BUTTO a 23	+5V	С	3	+5V
+12V	+5V		4	+5V
POST	-5V	E	5	-5V
COIN COUNTER (B)			6	+12V (+13V)
COIN LOCKOUT (B) K 9			7	POST
COIN LOCKOUT (B) K 9				COIN COUNTER (A)
M		K	9	COIN LOCKOUT (A)
W	SPEAKER (-)	L	10	SPEAKER (+)
VIDEO SYNC			11	
SERVICE SW R 14	VIDEO G	N	12	VIDEO R
SERVICE SW R 14		P	13	VIDEO B
COIN 2 T 16		R	14	
2P SELECT U 17 1P SELECT 2P UP V 18 1P UP	TILT SW	Š	15	
2P UP		T	16	COIN 1
2P DOWN W 19 1P DOWN X 20 Y 21 2P ACTION BUTTON Z 22 1P ACTION BUTTO a 23			17	1P SELECT
X 20 Y 21		٧	18	
Y 21	2P DOWN	W	19	1P DOWN
2P ACTION BUTTON Z 22 1P ACTION BUTTO a 23			20	
a 23			21	
	2P ACTION BUTTON	Z	22	1P ACTION BUTTON
b 24		а	23	
		Ь	24	
c 25		С	25	
d 26		d	26	
GND e 27 GND	GND	е	27	GND
GND f 28 GND	GND	f	28	GND

NOTE: BEFORE CHANGING THE SETTING OF THE DIP SWITCH. TURN THE POWER SWITCH OFF.

SETTING OF DIP SWITCH A

(*)	FACT	'ADV	CETT	TNC

SETTINGS		POSITIONS	1	2	3	4	5	6	7	8
PLAY STYLE	+2P AT T	HE SAME TIME	OFF							<u>. </u>
PLAI SIILE	IP ONLY		ON	1		Į				
SCREEN ROTATION	* NORM	AL		OFF	7	1				
SCREEN ROTATION	REVE	RSE		ON	7					
TEST MODE	* NORM	AL GAME			OFF	1	1			
1E21 MODE	TEST	MODE			ON	1	1			
ATTRACT SOUND	* WITH					OFF]			
ATTRACT SOUND	WITH	OUT				ON	1			
	* 1 CO	IN 1 PLAY					OFF	0.55]	
PLAY PRICING	2 CO	INS 1 PLAY					ON	OFF		
COIN A	3 CO	INS 1 PLAY					OFF	O.V.	l	
	4 CO	INS 1 PLAY	<u> </u>				ON	ON		
	* 1 CO	IN 2 PLAYS							OFF	
PLAY PRICING	1 CO	IN 3 PLAYS	}						ON	OFF
COIN B	1 CO	IN 4 PLAYS							OFF	0.,,
•	1 CO	IN 6 PLAYS] .						ON	ON

♦ SETTING OF DIP SWITCH B

SETTINGS		POSITIONS	1	2	3	4	5	6	7	8
	* RAI	VK B	OFF	OFF OFF						
GAME DIFFICULTY EASY (A) DIFFICULT (D)	RAI	NK A	ON							l
	RAI	NK C	OFF	OFF		1			•	
	RAI	NK D	ON	ON			1			}
NUMBER OF SPECIAL BLOCK(S)	*	2			1 .		OFF		Ī	
		1			OFF	ON	OFF	1	OFF	
		3	7		}		OFF		1	
		4	7				ON	ON		
CONTINUED PLAY	* WIT	TH .			1			<u> </u>	OFF	1
	WIT	THOUT	7						ON	1