CHUKATAISEN

				DIP SW 1										
SOLDER SIDE		PARTS SIDE		221 511 1			1	2	3	A	. 5	6	7	8
				TABLE TYPE	3		OFF		3	4		U	•	Ū
GND	1	GND		UPRIGHT TY		*	ON							
GND	2	GND		MONITOR	Normal	1		OFF		•	•			
+5V	3	+5V		F	Reverse		•	ON						
+5V	4	+5V		TEST MODE	Norr			•	OFF					
	5				Te	est	,		ON					
+12V	6	+12V (+13V)	•	DEMO SOUNI) Yes	s				OFF				
POST	7	POST			No					ON				
COIN COUNTER B	8	COIN COUNTER A		PLAY CHAR										
COIN LOCKOUT B	9	COIN LOCKOUT A		COIN A		lplay					OFF	OFF		
SPEAKER (-)	10	SPEAKER (+)				2play					ON	OFF		
	11		•			1play					OFF	ON		
VIDEO GREEN	12	VIDEO RED				3play					ON	ON		
VIDEO SYNC	13	VIDEO BLUE		COIN B		lplay							OFF	OFF
SERVICE SW	14	VIDEO GND				2play							ON	OFF
	15	COTY		•		lplay							OFF	ON
(COIN B)	16	COIN A			2coin	3play							ON	ON
2P START 2P UP	17 18	1P START												
2P DOWN	19	1P UP 1P DOWN	, ,	DIP SW 2										
2P LEFT	20	1P LEFT		DIP SW Z				2	•	4	_	4	-	8 -
2P RIGHT	21	1P RIGHT	•	DIFFICULT	у в		1 OFF	2 OFF	3	4	5	0	7	0
2P SHOOT BUTTON	22	1P SHOOT BUTTON			asy A		ON	OFF						
2P HOHJUTSU BUTTON	23	1P HOHJUTSU BUTTON			азул С		OFF	ON						
2 1101100120 201101.	24	21 HOLD CIDE BOTTON		Diffia	•		ON	ON						
	25			EXTEND CHARGE				011						
	26 1st/2nd (Every				erv)									
GND	27	GND		60,000/30					OFF	OFF				
GND	28	GND		40,000/200,000					ON	OFF				
				100,000/400,000					OFF	ON				
				150,000/50					ON	ON				
				NUMBER	3						OFF	OFF		
		•		OF PLAYE							ON	OFF		
			•		2		,				OFF	ON		
					1						ON	ON		
				NOT USED									OFF	OFF

F