

KEY CATCHER

SERVICE TIPS

BEFORE POWERING ON THE MACHINE

Before powering on the machine, remove all boxes, tape, Styrofoam and plastic bags from the playfield.

KEY RINGS AND PLUSH

You **must use** appropriate sized key rings and plush. (See Operating Manual pages 5 to 8)

MAIN POWER SWITCHES

There are 2 Main Power Switches in the cabinet. One is on the back of the cabinet. The other one is inside of the control panel. (See Operating Manual pages 2 & 3)

We prefer using the Main Power Switch inside the control panel for normal operations.

HOW TO CLEAR CREDITS ON LED DISPLAY

When you turn on the game, the LED displays on the control panel show credit(s) that were left from the last game. If you want to clear the credit(s), follow the next steps.

- 1 Turn off the Main Power Switch located inside of the control panel.
- 2 Hold the Service Switch (L) and (R) on the service switch board and turn on the Main Power Switch at the same time. (See Operating Manual page 10)
- 3 When the coin lock out switches beside the coin mech. make noise, the old credit(s) will be cleared and the LED Displays will show "0".

"H 2" FRONT GLASS DOORS

When the front glass doors are open, the machine will not work and the LED displays on the control panel will show the error letter "H 2". Also the machine will not play game sounds.

Just close and lock the front glass doors. (See Operating Manual pages 12 & 13)

Note: This error will not make any error sound.

HOW TO STOP ERROR SOUND

When the machine gets any error, it will make an error sound and one of the LED displays on the control panel will show some error letters. (See Operating Manual pages 12 & 13) Stop the error sound by hitting one of the Service Switches on problem side of the service switch board. LED Display still shows the error letters. Correct the error using the Operating Manual pages 12 and 13.

"b 5" PRIZE PAYOUT SENSOR

When a prize is left or stuck in the prize payout door, the LED display will show the error letters "b 5" on the side which has the problem and the machine will make the error sound. Take out the prize which has been left in the payout door. Stop the error sound by hitting one of the Service Switch on the problem side. Then hit one of the Test Switches on the problem side of the service switch board and the error will be cleared.

EXTRA SERVICE BUTTON

If you need extra service buttons for open house shows, etc., wire behind the Service Switches on the service switch board. If you wire to the coin switches directly, it will cause a coin error.



901 Cambridge Drive
Elk Grove Village, IL 60007-2434
Phone: (847) 364-9787
FAX: (847) 364-9831
Internet: www.sammyusa.com