ADJUSTMENTS OF GAME PC BOARD (MAJESTIC TWELVE G25 00630A)

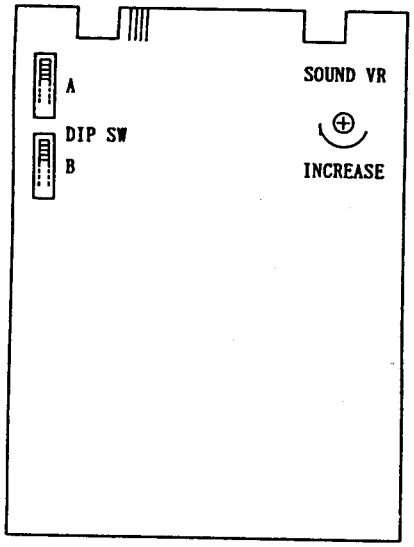

☆ CONTROL OF THIS GAME USES ONE 2-WAY JOYSTICK AND 2 BUTTONS.
(W-CONTROL PANEL)
(SEE THE SEPARATE TABLE ※.)

NOTE) BEFORE CHANGING THE SETTING OF DIP SWITCHES. TURN THE POWER OFF.

G-CONNECTOR (JAMMA)

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
POST	H	7	POST
COIN METER B	J	8	COIN METER A
COIN LOCKOUT B	K	9	COIN LOCKOUT A
SPEAKER (-)	L	10	SPEAKER (+)
SOUND GND	M	11	SOUND
VIDEO G	N	12	
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
(COIN B)	T	16	COIN A
2P SELECT	U	17	1P SELECT
	V	18	
	W	19	
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P A-BUTTON	Z	22	1P A-BUTTON
2P B-BUTTON	a	23	1P B-BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

◇ SETTING OF DIP SWITCH A

(*): FACTORY SETTING

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
PLAY STYLE	* TABLE	OFF							
	UPRIGHT	ON							
SCREEN ROTATION	* NORMAL		OFF						
	REVERSE		ON						
TEST MODE	* NORMAL GAME			OFF					
	TEST MODE			ON					
ATTRACT SOUND	* WITH				OFF				
	WITHOUT				ON				
PLAY PRICING	* 1 COIN 1 PLAY					OFF	OFF		
	2 COINS 1 PLAY					ON			
	3 COINS 1 PLAY					OFF	ON		
	4 COINS 1 PLAY					ON			
BUY-IN PLAY PRICING	* O							OFF	OFF
	1 COIN CONTINUE							ON	
	2 COINS CONTINUE							OFF	ON
	3 COINS CONTINUE							ON	

◇ SETTING OF DIP SWITCH B

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY(A) → DIFFICULT(D)	* RANK B	OFF	OFF	THE DIP SW A-1 IS EFFECTIVE ONLY WHEN THE DIP SW B-6 IS TURNED "ON".					
	RANK A	ON							
	RANK C	OFF	ON						
	RANK D	ON							
NUMBER OF SHIELD(S)	* 1			OFF	OFF				
	3			ON					
	2			OFF	ON				
	0			ON					
NUMBER OF PLAYER(S)	* 3					OFF			
	2					ON			
GAME TYPE	* 1P/2P GAME						OFF		
	1P/2P ALTERNATE GAME						ON		
CONTINUE	* WITH	← SEE THE SEPARATE TABLE. (※)						OFF	
	WITHOUT							ON	
GAME STYLE	*	← SEE THE SEPARATE TABLE. (※)							OFF
									ON

O: THIS SETTING SHOULD BE THE SAME SETTING AS THAT OF "PLAY PRICING".

※ 《SETTING OF THE DIP SW IN 1P/2P ALTERNATE GAME 》

B-6 "ON"	B-8 "OFF"	A-1 "OFF"	SINGLE CONTROL PANEL. WITH THE SCREEN ROTATION
		A-1 "ON"	SINGLE CONTROL PANEL. WITHOUT THE SCREEN ROTATION
	B-8 "ON"	A-1 "OFF"	SINGLE CONTROL PANEL. WITH THE SCREEN ROTATION
		A-1 "ON"	DOUBLE CONTROL PANEL. WITHOUT THE SCREEN ROTATION

WHEN DIP SW B-6 IS TURNED "OFF" (1P/2P GAME). THE DIP SW B-8 SHOULD BE TURNED "OFF". BECAUSE OF THE CONDITION OF CONTROL PANEL. THEN ONLY ONE PLAYER PLAYS THIS GAME. TURN THIS B-8 TO "ON" POSITION. (IN THIS CASE. THE 2P SELECT SW DOSE NOT WORK.)