





STAR FORCE™


STAR FORCE

Feuern Sie Salven
mit Ihrer Laserkanone
ab, um die angreifen-
den Gegnern zu schlagen

Treffen Sie verschie-
dene Bonusziele




Wenn Sie das  ab-
schießen, das zusammen
mit den Angreifern er-
scheint, taucht der
Purser () auf.
Docken Sie an den
Purser an, um die
Kampfkraft zu erhöhen.

Haben Sie eine gewisse
Anzahl an gegnern oder
deren Basen zerstört,
erscheint das Alpha
Target () , welches
zu vernichten ist.

SOLDER SIDE (ハンダ面)	NO.	COMPONENT SIDE (部品面)
2P RIGHT	1	2P LEFT
2P UP	2	2P DOWN
2P FIRE SW	3	
	4	
1P RIGHT	5	1P LEFT
1P UP	6	1P DOWN
1P FIRE SW	7	
	8	
1P START	9	2P START
COIN SW1	10	COIN SW2
GND	11	GND
GND	12	GND
GND	13	GND
SPEAKER (+)	14	SPEAKER (-)
+12V	15	+12V
	16	
+5V	17	+5V
+5V	18	+5V

CONNECTOR KEL-1168-036-009


●ジョイスティックレバー8方向
JOYSTICK LEVER 8 directions



1	BLUE
2	GREEN
3	RED
4	GND
5	SYNC
6	GND

CONNECTOR-S6P-SHE-1

電源 POWER SOURCE
+5V 7A
+12V 1A
(AF Amp. BTL system)

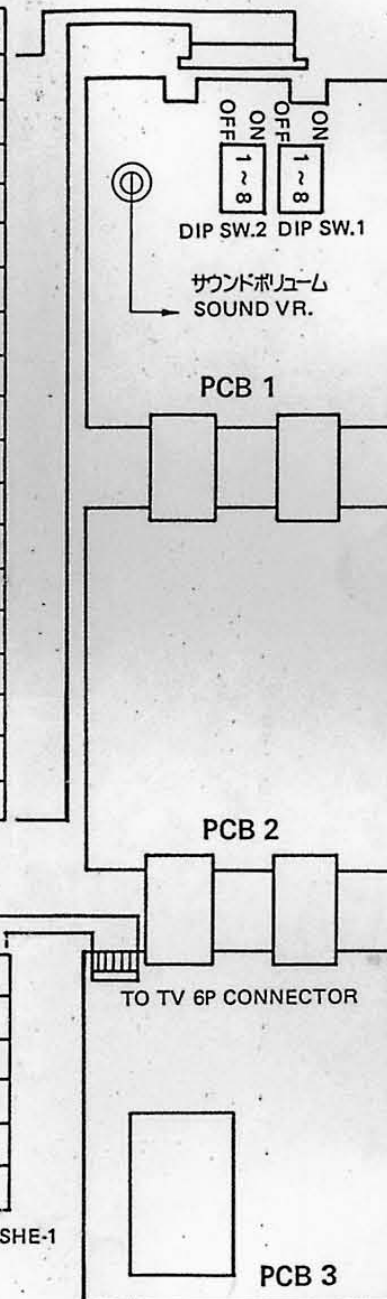

DIP SWITCH 1		1	2	3	4	5	6	7	8
COIN1	1COIN - 1PLAY	OFF	OFF						
	2COIN - 1PLAY	ON	OFF						
	1COIN - 2PLAY	OFF	ON						
	1COIN - 3PLAY	ON	ON						
COIN2	1COIN - 1PLAY			OFF	OFF				
	2COIN - 1PLAY			ON	OFF				
	1COIN - 2PLAY			OFF	ON				
	1COIN - 3PLAY			ON	ON				
THE NUMBER OF FINAL STARS	3					OFF	OFF		
	4					ON	OFF		
	5					OFF	ON		
	2					ON	ON		
タイプ TYPE	テーブル COCKTAIL TABLE							OFF	
	アップライト UPRIGHT							ON	
デモンストレーション音 DEMONSTRATION SOUND	音有 SOUND								OFF
	音無 NON SOUND								ON

DIP SWITCH 2		1	2	3	4	5	6	7	8
エキステンド EXTEND	50000, 200000, 500000	OFF	OFF	OFF					
	100000, 300000, 800000	ON	OFF	OFF					
	50000, 200000	OFF	ON	OFF					
	100000, 300000	ON	ON	OFF					
	50000	OFF	OFF	ON					
	100000	ON	OFF	ON					
	200000	OFF	ON	ON					
	No	ON	ON	ON					
難易度 DIFFICULTY	NORMAL				OFF	OFF	OFF		
	DIFFICULT 1				ON	OFF	OFF		
	DIFFICULT 2				OFF	ON	OFF		
	DIFFICULT 3				ON	ON	OFF		
	DIFFICULT 4				OFF	OFF	ON		
	DIFFICULT 5				ON	OFF	ON		
	NOT USED				OFF	ON	ON		
	NOT USED				ON	ON	ON		