


FLOWER (834-5998)

44PIN P: 4mm

COIN/CREDIT OPTION SWITCH SETTING

DIP SWITCH #1

OPTION		1	2	3	4	5	6	7	8
PLAYERS SHIPS	1	OFF	OFF	OFF					
	2	ON	OFF	OFF					
	3	OFF	ON	OFF					
	4	ON	ON	OFF					
	5	OFF	OFF	ON					
	6	ON	OFF	ON					
	7	OFF	ON	ON					
FREE		ON	ON	ON					
1 COIN 1 CREDIT					OFF	OFF			
1 COIN 2 CREDITS					ON	OFF			
2 COINS 1 CREDIT					OFF	ON			
3 COINS 1 CREDIT					ON	ON			
TABLE UPRIGHT							OFF		
ATRACT SOUND							ON		
EXTRA SHIPS	30,000	AND	50,000						OFF
	50,000	EVERY	80,000						ON

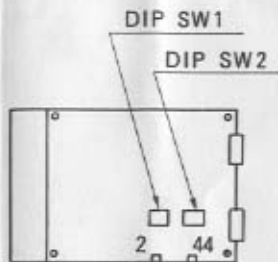

PART SIDE


SOLDER SIDE

PART SIDE	SOLDER SIDE
GND	GND
GND	GND
RED	GREEN
BLUE	SYNC
NOT USE	METER 1
NOT USE	NOT USE
NOT USE	2P START
1P START	COIN SW1
NOT USE	2P CUTTER
2P MISSILE	2P LASER
2P RIGHT	2P LEFT
2P DOWN	2P UP
NOT USE	1P CUTTER
1P MISSILE	1P LASER
1P RIGHT	1P LEFT
1P DOWN	1P UP
SP (+)	SP (-)
+5V	+12V
+5V	+5V
+5V	+5V
GND	GND
GND	GND

OPTION SWITCH SETTING

DIP SWITCH #2

OPTION		1	2	3	4	5	6	7	8		
ゲームモード		NOT USE			常時						
					OFF						
					ON						
										OFF	
										ON	
											OFF
											ON
難易度	パワー減少	遅い									
		速い									
	取得武器 (射撃時)	なくなる									
		なくならない									
	敵弾の数	少ない									
		多い									
	攻撃範囲	狭い									
		広い									

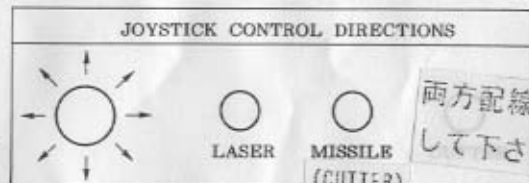

SUPPLY VOLTAGES & CURRENT

VOLTAGE	CURRENT
DC5V	4.6A
DC12V	1.0A