


## Bulk version (For SPAIN) Ver. A16P

Feature of Capsule Payout Version.

- ? Add the Hopper Unit on Top behind the Marquee.
- ? Capacity of Hopper is 300 capsules.
- ? Add/mount the Capsule Drain.
- ? Use Round Capsule (About 1.26" dia = 32mm dia) for EURO Market. (France, Spain...etc.)
- ? Ver. A16P has only one style of payout setting.
  - 1) Pay out every time before start the game.
- ? Top Opening Door of Hopper Unit.
- ? Use the EP-ROM "Ver. A16P." Please refer to the Setting table on following page.

1) Exchange the EP-ROM to Ver. A16P. Refer to picture below.

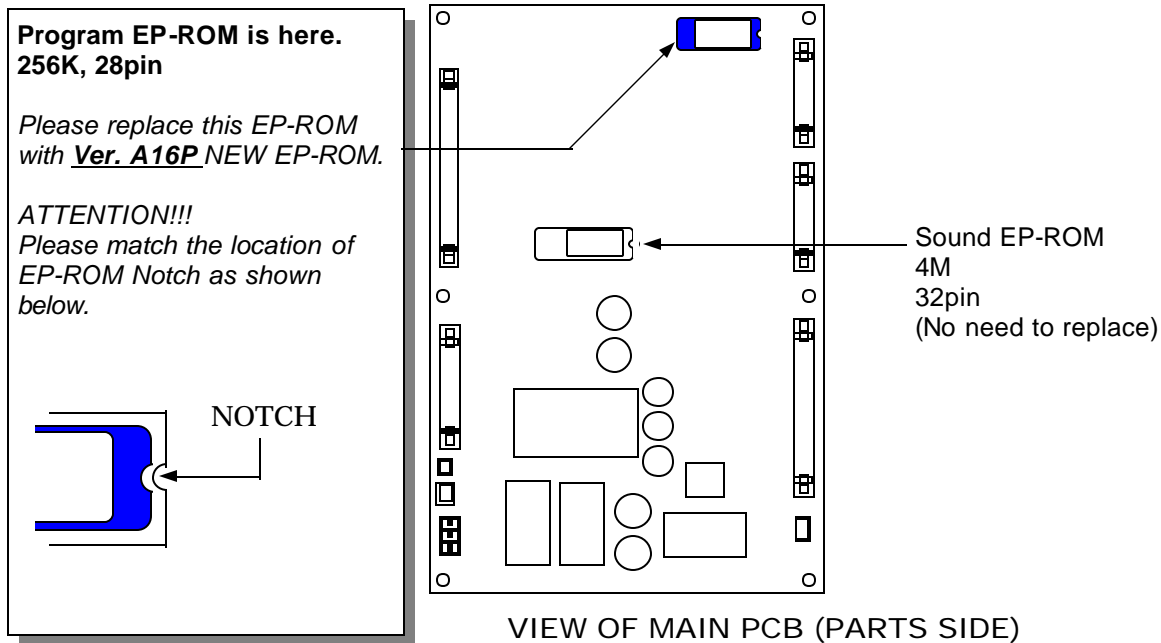


**After exchanging the EP-ROM, do the following to reset the MAIN PCB:**

- Press and hold the SERVICE CREDIT SWITCH then re-power on the game. Continue to Press and hold the SERVICE CREDIT SWITCH until attract sound comes on.

**NOTE:**

*You will have to re-set some Settings in the setting mode again, specifically pertaining to Winability and Lamp speed (See manual setting table.)*

# SPECIFICATIONS

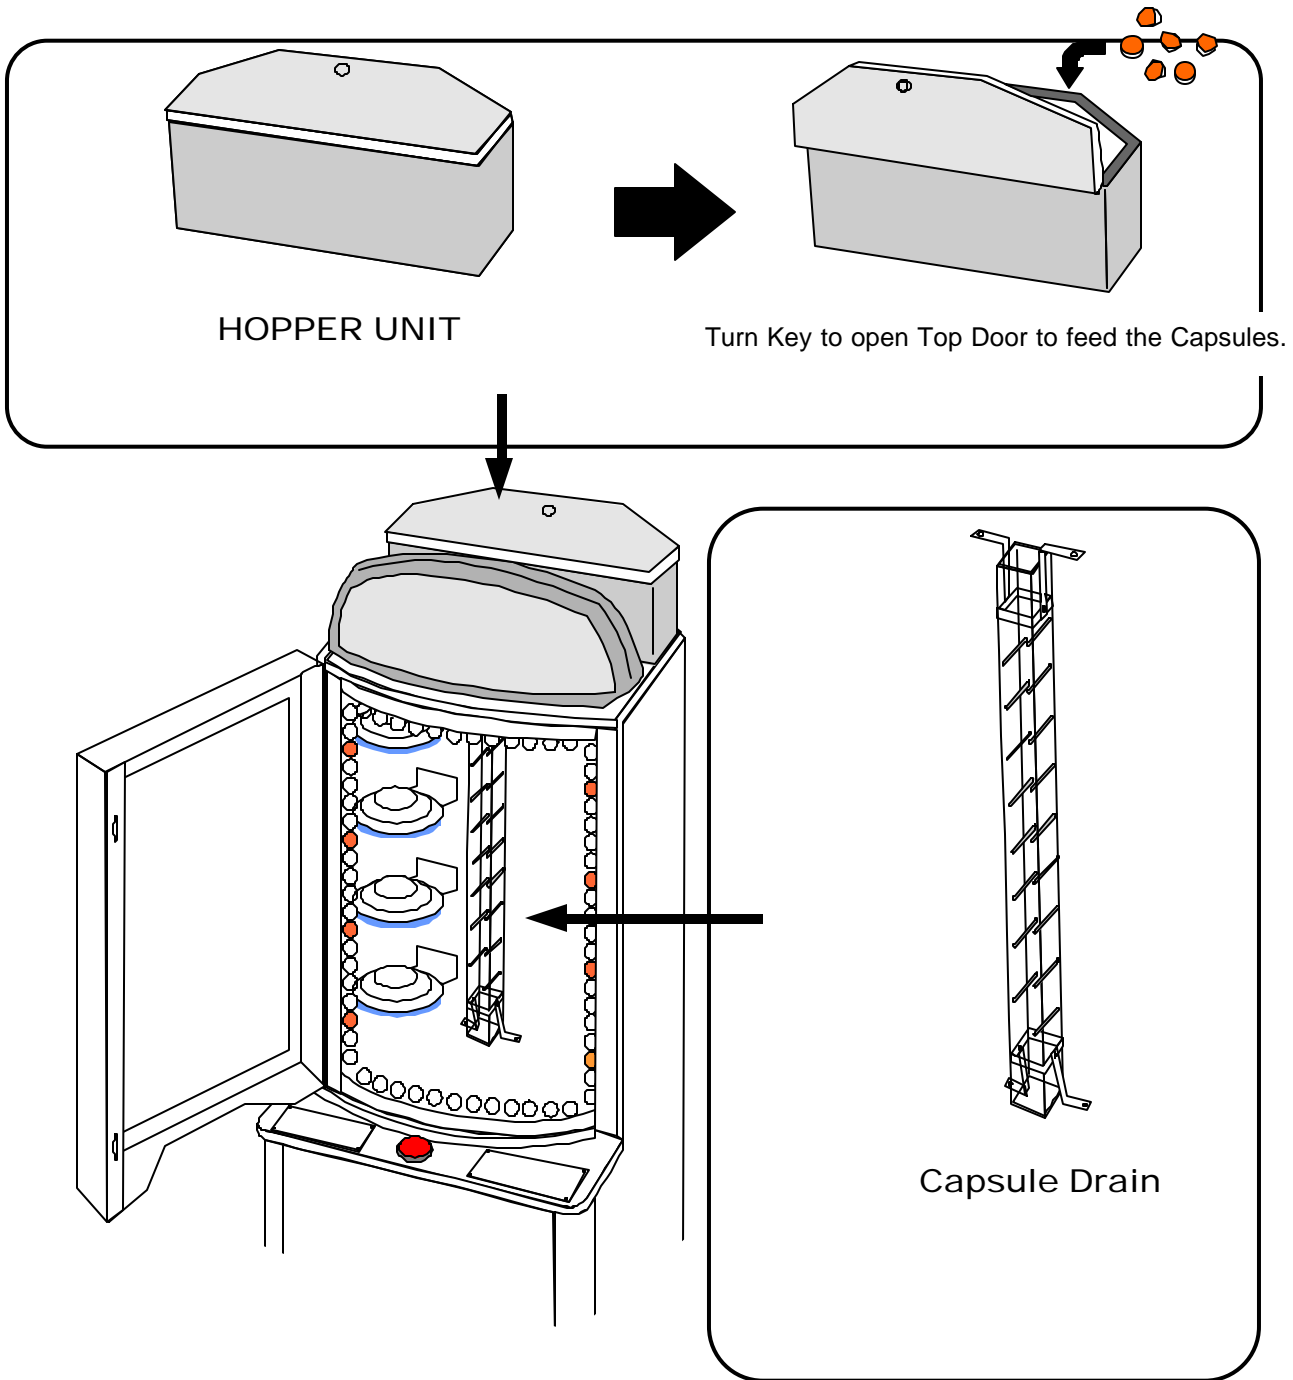

# TABLE OF SETTING FUNCTIONS (Ver. A16P)

FUNCTION# (LED1 & 2)	FUNCTION	SETTING# (LED3 & 4)	SETTING	NOTE	
01	WINABILITY	0	HARDEST ↑ ↓	5%	
		1		10%	
		2		15%	
		3		17.5%	
		4	20%		
		5	↑ ↓ EASIEST	22.5%	
		6		25%	
		7		27.5%	
		8		30%	
		9		32.5%	
		10		35%	
		11		37.5%	
		12		40%	
		13		45%	
		14		50%	
		15	WINNER EVERY PLAY	100%	
02	COIN CHUTE  If you want to have 2 credits per 100 pesetas, please use Electronic Coin Mech. to give 2 pulses when the 100 pesetas coin is accepted. Then Setting 0 will be 50 pesetas per 1/2 credit. Setting 1 will be 100 pesetas per 1 credit. Setting 0 of Prize Value settings (L1 to R4) also changes to 50 pesetas.	0	1 COIN / 1 CREDIT	100 pesetas per play	
		1	2 COINS / 1 CREDIT	200 pesetas per play	
		2	3 COINS / 1 CREDIT	300 pesetas per play	
		3	4 COINS / 1 CREDIT	400 pesetas per play	
		4	5 COINS / 1 CREDIT	500 pesetas per play	
		5	6 COINS / 1 CREDIT	600 pesetas per play	
		6	7 COINS / 1 CREDIT	700 pesetas per play	
		7	8 COINS / 1 CREDIT	800 pesetas per play	
		8	9 COINS / 1 CREDIT	900 pesetas per play	
		9	10 COINS / 1 CREDIT	1000 pesetas per play	
		10	11 COINS / 1 CREDIT	1100 pesetas per play	
		11	12 COINS / 1 CREDIT	1200 pesetas per play	
		12	13 COINS / 1 CREDIT	1300 pesetas per play	
		13	14 COINS / 1 CREDIT	1400 pesetas per play	
		14	15 COINS / 1 CREDIT	1500 pesetas per play	
		15	16 COINS / 1 CREDIT	1600 pesetas per play	
		16	17 COINS / 1 CREDIT	1700 pesetas per play	
		17	18 COINS / 1 CREDIT	1800 pesetas per play	
		18	19 COINS / 1 CREDIT	1900 pesetas per play	
		19	20 COINS / 1 CREDIT	2000 pesetas per play	
03	LAMP SPEED	0	SLOWEST		
		1	SLOW		
		2	<b>NORMAL</b>		
		3	FAST		
		4	FASTER		
		5	FASTEST		
		6	RANDOM FAST		Combo of normal & fast
		7	RANDOM SLOW		Combo of normal & slow

**"FACTORY INSTALLED" SETTING**

# TABLE OF SETTING FUNCTIONS (Ver. A16P)

FUNCTION# (LED 1 & 2)	FUNCTION	SETTING# (LED 3 & 4)	SETTING	NOTE	
04	DIRECTION OF FLASHING LAMPS	0	CLOCKWISE		
		1	COUNTER CLOCKWISE		
		2	RANDOM		
05	CAROUSEL ERROR	0	OFF	If prize vending unit has a problem, display "error code" and stop.	
		1	ON		
06	AUTO STOP TIMER	0	10 SECONDS	Lamps will stop automatically if player does not hit stop button.	
		1	20 SECONDS		
		2	40 SECONDS		
		3	60 SECONDS		
07	TILT SYSTEM	0	ON		
		1	OFF		
08	ATTRACT SOUND	0	ON		
		1	OFF		
09	FREE PLAY	0	OFF	Regular Game	
		1	ON	Free play	
10	BONUS CREDIT	0	OFF		
		1	4 COINS / 3 CREDITS		400 pesetas/3 CREDITS
		2	20 COINS / 11CREDITS		2000 pesetas/11 CREDITS
11	CAPSULE PAYOUT	0	Before game start		
12	WHEN THE CAPSULE IS EMPTY	0	ON	Stop at Error code "CP"	
L1 THROUGH r4	PRIZE VALUE OF EACH VENDING UNIT  Use these settings when using prizes of various values. You can set each individual vending unit based on the prize cost. (See manual for detail)	0	100 pesetas	1 coin	
		1	200 pesetas	2 coins	
		2	300 pesetas	3 coins	
		3	400 pesetas	4 coins	
		4	600 pesetas	6 coins	
		5	700 pesetas	7 coins	
		6	800 pesetas	8 coins	
		7	1000 pesetas	10 coins	
		8	1400 pesetas	14 coins	
		9	2000 pesetas	20 coins	
		10	3000 pesetas	30 coins	
		11	4000 pesetas	40 coins	
		12	5000 pesetas	50 coins	
		13	6000 pesetas	60 coins	
		14	7000 pesetas	70 coins	
15	8000 pesetas	80 coins			

**"FACTORY INSTALLED" SETTING**

# CABINET WIRING (Capsule Payout version for SPAIN)

